

CONSEJOS




Responsabilidad:

El montaje o la instalación inadecuados pueden provocar lesiones. También puede dañar al aparato o su TV con un montaje inadecuado. Lea este manual de instalación detenidamente antes de la instalación.

1. El producto debe ser instalado por profesionales.
2. Si no entiende, comuníquese con un instalador local calificado.
3. Si el producto está defectuoso o faltan accesorios, no lo instale. Póngase en contacto con el establecimiento donde lo ha comprado.
4. Este producto es adecuado para pantallas de plasma / LCD de 42"-80" y puede soportar hasta un máximo de 70 kg.
5. Este producto se utiliza en columnas de paredes de madera maciza o paredes macizas.
6. Por razones de seguridad, confirme que la pared donde va a instalar el producto debe soportar el peso combinado del televisor, el soporte y los accesorios tres veces más.
7. Este producto solo se puede usar para esta función, no lo use para otros propósitos. El fabricante no se hace responsable de usos inadecuados.
8. El fabricante no será responsable de los daños a la vertical.
9. El fabricante declara por la presente que no es responsable de ningún daño o daño causado por la instalación que no cumpla con los requisitos de responsabilidad.


move with
MOBIL 

SOPORTE PARA TV MB-TV4280

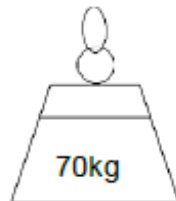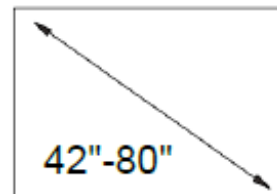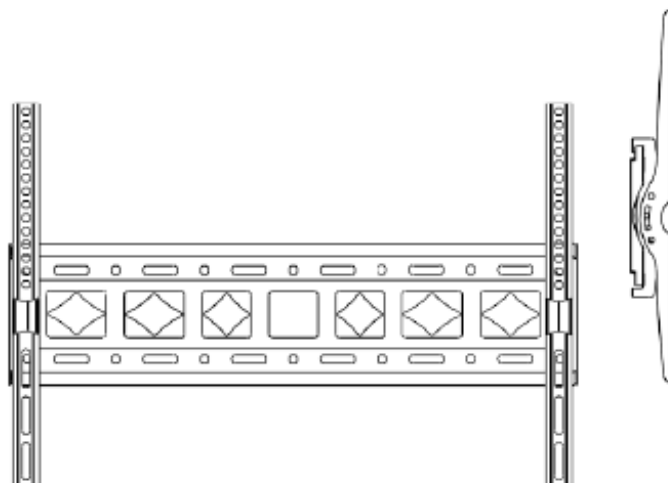

1

 Nivel de Burbuja  Taladro Eléctrico  Lapiz  Broca 10mm

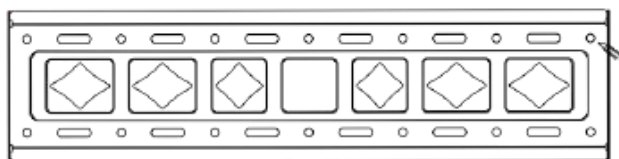


- Sostener la placa en la pared y poner el nivel de burbuja encima.
- Nivelar hasta que la burbuja esté en el centro y señalar los orificios en la pared para hacer los taladros.

2

A  Ø12X58mm 4PCS



B  M8X60mm 4PCS

C  Ø20XØ8X2mm 4PCS

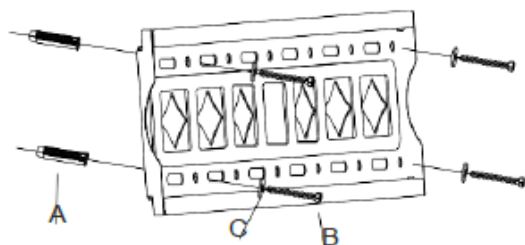

- Hacer los taladros en las marcas señaladas en la pared, introducir los tacos (A) y atornillar la placa a la pared con los tornillos (B) y las arandelas (C).

3

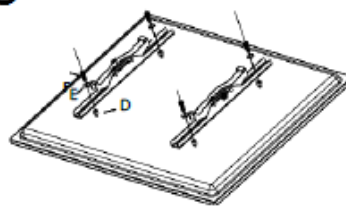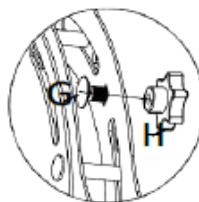

D  Ø10xØ8x10mm 4PCS

E  Ø16xØ6x1.5mm 4PCS


F  M5x25mm 4PCS
M6x25mm 4PCS

G  M6x16mm 2PCS


H  M6 2PCS

- Montar los anclajes a los perfiles con los tornillos (G) y las tuercas (H).
- Montar los perfiles a la TV con los tornillos (F) y las arandelas (E).
- Prestar atención a la longitud del tornillo a la TV. Si son demasiado largos utilizar espaciador (D).

4

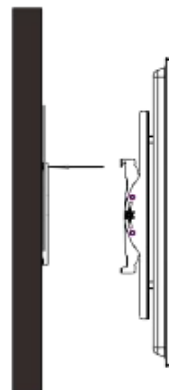

Anclar la TV a la placa de la pared. Hacer que entren primero las ranuras superiores y luego las inferiores.

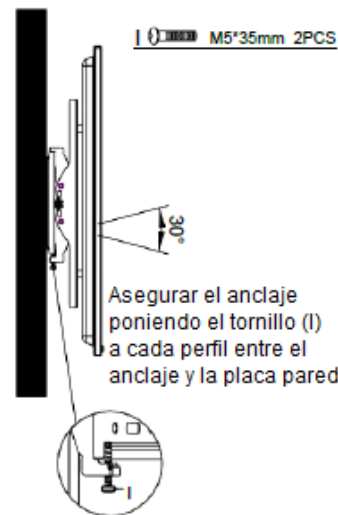

Asegurar el anclaje poniendo el tornillo (I) a cada perfil entre el anclaje y la placa pared.

TIPS!

Disclaimer: improper assembly or installation may result in injury or death Destruction or destruction of property. Please read this installation manual carefully before installation Information.

1. The product must be installed by professionals.
2. If you do not understand, please contact a qualified local installer.
3. If the product is abnormal or missing, please do not assemble or install it.

Please contact the local dealer get help.

4. This product is suitable for 32"-75" LCD/plasma screen, and can bear 70kg




5. This product is used on solid wood wall column or solid wall.

6. For safety reasons, please confirm that the wall of the installation product should bear the combined weight of the TV set, bracket and accessories three times as much. If the expansion tube on the wall is found to be loose during installation, please stop the installation.

7. This product can only be used for display in this range, please do not use for other purposes.


8. The manufacturer shall not be responsible for the damage to the vertical wall caused by unloaded or accidental load.

9. The manufacturer hereby declares that it is not liable for any damage or damage caused by the installation not in accordance with the requirements responsibility.

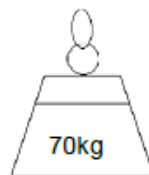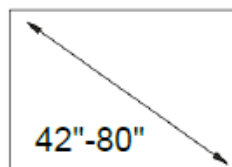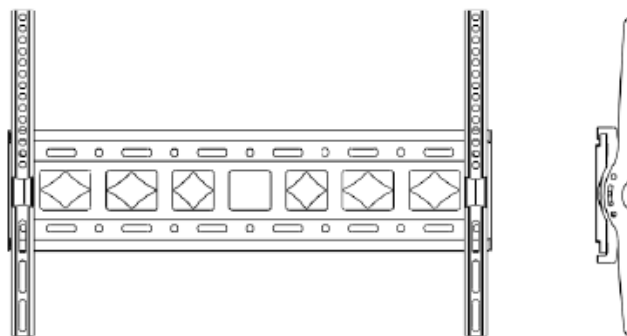



1

Bubble Level Electric Drill Pencil Drill

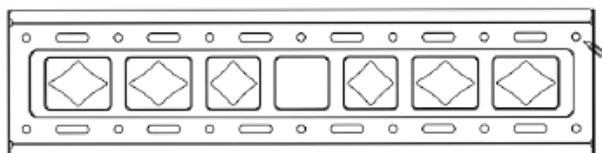

1. Stick a pencil in the wall According to the product installation board installation Draw points on the holes and drill them into place Hole.

3

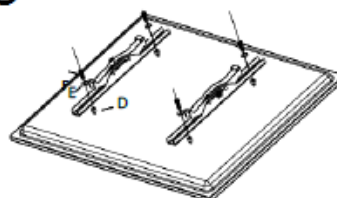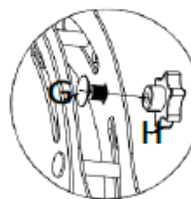

3.1 lock the carriage screw (G) and knob (H) on the movable hook as shown in FLG.1
3.2 fix the movable hook on the TV set with screw (F) through the gasket (E) Depends on what you need adding the spacer (D)

D Ø10xØ8x10mm 4PCS

E Ø16xØ6x1.5mm 4PCS

F M5x25mm 4PCS
M6x25mm 4PCS

G M6x16mm 2PCS


H M6 2PCS

2

A Ø12X58mm 4PCS


B M8X60mm 4PCS

C Ø20XØ8X2mm 4PCS

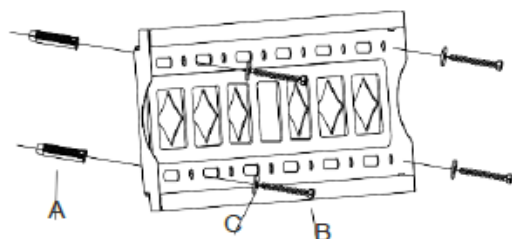


2. Put the expansion pipe (A) into the installation hole of the wall. Self-tapping screws (B) Fix the product mounting plate to the wall through the gasket (C)

4

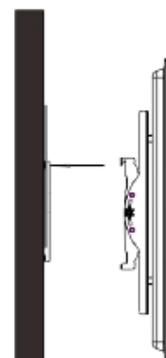

4. Install the TV set with the fixed movable hook on the wall Loading on board

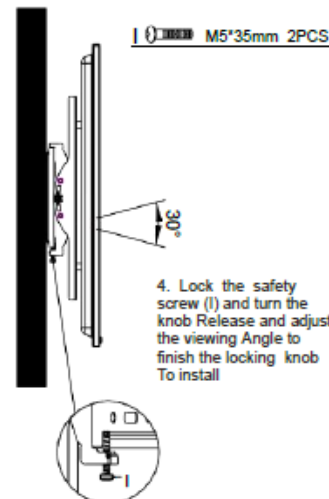

4. Lock the safety screw (I) and turn the knob Release and adjust the viewing Angle to finish the locking knob To install