GO ROCK®
ENJOY MUSIC!

MANUAL DE INSTRUCCIONES

ALTAVOZ INALÁMBRICO PORTÁTIL

GR-56

ATENCIÓN

- Leer atentamente este manual antes de usar el aparato por primera vez.
- Guardar este manual para futuras consultas.
- Si presta o vende este aparato debe ir acompañado de este manual.

Estimado Cliente:

Agradecemos la confianza depositada en nosotros al adquirir este producto GOROCK® . Nuestro principal empeño es ofrecer artículos excelentes, manteniendo los más estrictos controles de calidad y cumpliendo todas las normativas vigentes de seguridad, con el objetivo de presentar un producto perfecto y seguro para el uso doméstico.

ESPECIFICACIONES

• Versión inalámbrica: 5.0
• Función TWS (Esta función conecta a 2 altavoces iguales entre sí).
• Tamaño del altavoz: 3”
• Potencia de salida: 5W
• Respuesta de frecuencia: 100Hz-20KHz
• Relación señal / ruido:> = 85dB
• Rango de escaneo FM: 87.5-108.0Mhz
• Alcance inalámbrico: 10 metros
• Memoria máxima admitida: USB / TF: Hasta 32 GB.
• Carga USB: DC 5V
• Capacidad de la batería: 500 mAh
• Autonomía / Tiempo de uso: Hasta 1 hora a máximo volumen.
• Puerto de carga: MicroUsb.
• Tiempo cargando: Dependerá del amperaje del cargador utilizado.

Accesorios:

• Cable de carga (Usb a MicroUsb).

PANEL DE MANDOS

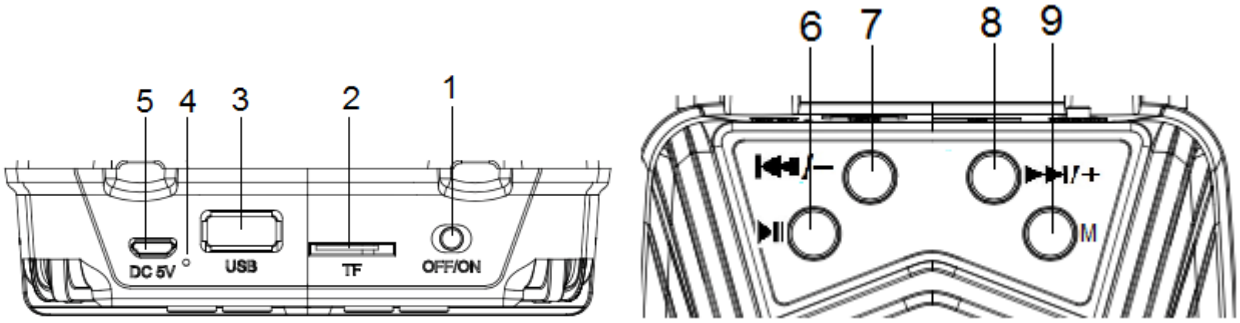

1. Botón On/Off.
2. Puerto TF lector de tarjetas de memoria MicroSD (max.32Gb).
3. Puerto Usb lector de pendrives (max.32Gb).
4. Piloto indicador de cuando está cargando.
5. Puerto de carga MicroUsb (5VDC).
6. Botón Play/Pause.
7. Botón para retroceder pista y bajar volumen.
8. Botón para siguiente pista y subir volumen.
9. Botón mode “M” para cambiar de función (BT/USB-TF/FM).

CARGA DE LA BATERÍA

- La batería se debe cargar al 100% antes del primer uso.
- El cargador utilizado debe ser de 5V y tener un amperaje de hasta 2A máximo.
- Cuando se enchufa a cargar se enciende un piloto rojo indicando “cargando”.
  El piloto se apaga cuando la carga está completa.
- Nunca se debe interrumpir la carga una vez enchufado a cargar.
- El tiempo de carga dependerá del amperaje del cargador utilizado.
- No encender el altavoz mientras está cargando.
- Si no va a utilizar el altavoz durante un tiempo, debe mantener a la batería con carga.
  Cargar la batería al menos una vez al mes.
  Si la batería se queda sin carga puede averiarse.

CONECTAR A DISPOSITIVO BLUETOOTH

Encienda el altavoz y encienda su dispositivo móvil Bluetooth, luego busque el nombre del modelo de altavoz "GR-56" y selecciónelo para emparejarlo.
Una vez emparejado el Bluetooth, el altavoz se conectará automáticamente las próximas veces que se encienda.

MODO BLUETOOTH

El altavoz entra directamente en modo Bluetooth al encenderlo. Después de emparejar el dispositivo, puede reproducir la música, presione brevemente ►II para reproducir / pausar, presione ◄◄ y ►► para anterior / siguiente canción.
Mantener pulsado - / + para bajar o subir el volumen.

FUNCIÓN TWS

- Esta función conecta a 2 altavoces idénticos entre sí
- Esta función solamente funciona en modo bluetooth.
- Para activar siga los siguientes pasos:
  1. Encender los 2 altavoces.
  2. Elegir a uno de ellos y presionar la tecla “M” durante 5-10 segundos hasta la señal.
  3. Una vez vinculados entre sí, proceder a conectar el dispositivo bluetooth.

MODO USB / TF

Inserte una tarjeta MicroSD en la ranura TF ó un pendrive en el puerto Usb,
el altavoz leerá la música en formato MP3 automáticamente. Presione ►II para Reproducir / Pausa, presione brevemente ◄◄ y ►► para anterior o siguiente canción.
Mantener pulsado - / + para bajar ó subir volumen.

MODO RADIO FM

- Presione ►ll para la búsqueda y el memorizado de emisoras.
- Una vez memorizadas las emisoras, pulsar ◄◄ y ►► para anterior y siguiente.
- Mantener pulsado - / + para bajar o subir el volumen.

NOTA:
Si la recepción de la emisora no es buena, conectar simplemente un cable MicroUsb suelto sin cargador y hará de antena mejorando la recepción de la señal FM.

CONDICIONES DE GARANTÍA

- Este aparato está cubierto contra cualquier avería eléctrica por fallo del fabricante.
- La garantía cubre averías causadas por el propio sistema eléctrico del fabricante.
- En el ticket o factura deben aparecer los datos del aparato para ser documento válido.

- La garantía no cubre:
  - Averías causadas por golpes o mal uso por negligencias del usuario.
  - Daños estéticos.
  - Cuando no se dispone de ticket o factura de compra.
  - Cuando no se dispone de ticket, factura o tarjeta de garantía cumplimentada.

Nota.
Durante el período de garantía, la tienda donde compra el aparato es la responsable y encargada de gestionar y tramitar la garantía en caso de avería.
Debe ir a la tienda donde compró el aparato con su ticket o factura de compra.

NORMAS DE PROTECCIÓN DEL MEDIO AMBIENTE

Este aparato no se debe desechar con los residuos domésticos cuando finalice su durabilidad, sino que se debe ofrecer a un centro de reciclaje de aparatos eléctricos y electrónicos domésticos. Este símbolo en el aparato, manual de instrucciones y embalaje le avisa de este aspecto importante.

El/los materiales utilizados en este aparato se pueden reciclar. Mediante el reciclaje de electrodomésticos, usted contribuye a fomentar la protección del medioambiente. Consulte a sus autoridades locales información acerca del punto de recogida.

GO ROCK®
ENJOY MUSIC!

USER´S GUIDE

WIRELESS SPEAKER PORTABLE

GR-56

ATTENTION

- Read this manual carefully before using the appliance for the first time.
- Save this manual for future reference.
- If you lend or sell this device, it must be accompanied by this manual.

Dear Customer

We thank you very much for having purchased this GOROCK® product.
Our main commitment is to provide excellent articles, maintaining the strictest quality controls and compliance with all applicable safety regulations, with the aim of presenting a perfect and safe product for home use.

SPECIFICATIONS

- Wireless version: 5.0
- TWS Function (This function link to 2 equal speakers together).
- Speaker size: 3”
- Output power: 5W
- Frequency response: 100Hz-20KHz
- Signal to noise ratio: >= 85dB
- FM Scan Range: 87.5-108.0Mhz
- Wireless range: 10 meters
- Maximum supported memory: USB / TF: Up to 32 GB.
- USB charging: DC 5V
- Battery capacity: 500mAh
- Autonomy / Time of use: Up to 1 hour at maximum volume.
- Charging port: MicroUsb.
- Charging time: It will depend on the amperage of the charger used.

Accessories:
- Charging cable (Usb to MicroUsb).

CONTROL PANEL

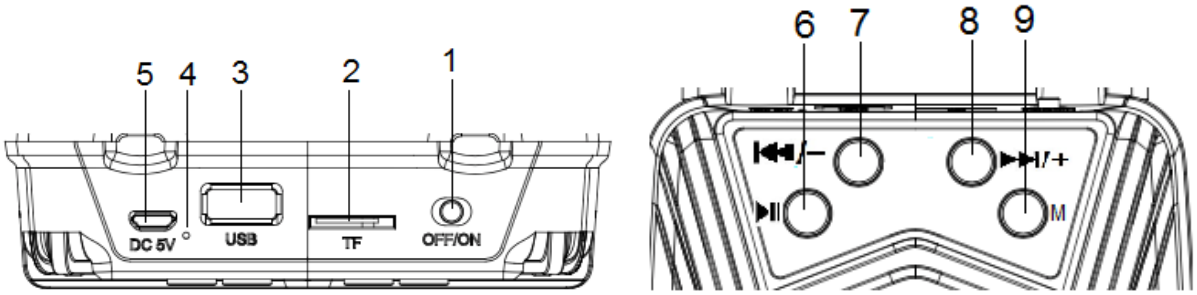

1. On/Off Switch button.
2. TF Port for MicroSD Memory Cards (max.32Gb).
3. Pendrives Usb Port (max.32Gb).
4. Charging light indicator.
5. MicroUsb Charging Port.
6. Play/Pause button.
7. Previous track and decrease volume.
8. Next track and increase volume.
9. “M”. Mode button for change the functios.

BATTERY CHARGE

- The battery must be charged to 100% before first use.
- The charger used must be 5V and have an amperage of up to 2A maximum.
- When plugged in to charge, a red light comes on indicating “charging”.
  The pilot light goes out when charging is complete.
- Charging should never be interrupted once plugged in to charge.
- The charging time will depend on the amperage of the charger used.
- Do not turn on the speaker while it is charging.
- If you are not going to use the speaker for a while, you should keep the battery charged.
  Charge the battery at least once a month.
  If the battery runs out of charge it can be damaged.

CONNECT TO BLUETOOTH DEVICE

Turn on the speaker and turn on your Bluetooth mobile device, then search for the speaker model name “GR-56" and select it to pair.
Once the Bluetooth is paired, the speaker will automatically connect the next times it is turned on.

BLUETOOTH MODE

The speaker directly enters Bluetooth mode when you turn it on. After pairing the device, you can play the music, short press ►ll to play/pause, press ◄◄ and ►► to previous/next song.
Long press - / + to decrease or increase the volume.

TWS FUNCTION

- This function connects 2 identical speakers to each other
- This function only works in bluetooth mode.
- To activate follow these steps:
  1. Turn on the 2 speakers.
  2. Choose one of them and press the “M” key for 5-10 seconds until the signal.
  3. Once paired with each other, proceed to connect the bluetooth device.

USB/TF MODE

Insert a MicroSD card into the TF slot or a pen drive into the USB port,
the speaker will read the music in MP3 format automatically. Press ►ll to Play / Pause, short press ◄◄ and ►► to previous or next song.
Long press - / + to decrease or increase volume.

FM RADIO MODE

- Press ►II to search and store stations.
- Once the stations are memorized, press ◄◄ and ►► to previous and next.
- Long press - / + to decrease or increase the volume.

NOTE:
If the reception of the station is not good, simply connect a MicroUsb cable loose without a charger and it will act as an antenna, improving the reception of the FM signal.

WARRANTY CONDITIONS

- This appliance is covered against any electrical breakdown due to manufacturer's fault.
- The warranty covers breakdowns caused by the manufacturer's own electrical system.
- The device data must appear on the ticket or invoice to be a valid document.

- The guarantee does not cover:
    - Faults caused by blows or misuse due to user negligence.
    - Physical damages.
    - When there is no ticket or purchase invoice.
    - When there is no completed ticket, invoice or warranty card.

Note.
During the warranty period, the store where you buy the appliance is responsible and in charge of managing and processing the guarantee in the event of a breakdown. You must go to the store where you bought the device with your ticket or purchase invoice.

GUIDELINES FOR PROTECTION OF THE ENVIRONMENT

This appliance should not be put in to the domestic garbage at the end of its durability, but must be offered at a central point for their cycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and pack again put your attention to this import an tissue.

The materials used in this appliance can be recycled. By recycling of used domestic appliances, you contribute important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

GO ROCK®
ENJOY MUSIC!

GR-56

8 436588 776525

www.thulos.com
info@grupothulos.com
Servicio Técnico / Technical Service: sat@grupothulos.com

JMC23092022/1