



MANUAL DE INSTRUCCIONES

ALTAVOZ INALÁMBRICO PORTÁTIL

GR-64

ATENCIÓN

- Leer atentamente este manual antes de usar el aparato por primera vez.
- Guardar este manual para futuras consultas.
- Si presta o vende este aparato debe ir acompañado de este manual.

Estimado Cliente:

Agradecemos la confianza depositada en nosotros al adquirir este producto GOROCK® . Nuestro principal empeño es ofrecer artículos excelentes, manteniendo los más estrictos controles de calidad y cumpliendo todas las normativas vigentes de seguridad, con el objetivo de presentar un producto perfecto y seguro para el uso doméstico.

INSTRUCCIONES DE SEGURIDAD

- Mantener seco el aparato en todo momento.
- No usar en zonas con ambiente húmedo.
- El aparato pueden usarlo niños a partir de 8 años y por personas con capacidades físicas, sensoriales o mentales reducidas, o que no tengan experiencia ni conocimientos, si son supervisados o instruidos en el uso del aparato de forma segura y entienden los riesgos implicados.
- Este aparato no es un juego para niños.
- Solamente puede ser reparado por un servicio técnico autorizado.
- Nunca usar cerca de donde pueda haber agua u otro líquido.
- No usar cerca de aerosoles, sprays o productos con gas comprimido.
- No usar en bañeras, duchas ni cerca de depósitos llenos de agua.
- Prohibido usar el aparato cerca de agua o cualquier otro líquido.
- Este aparato solo es para uso doméstico y ocasional.
- Desenchufar de la corriente inmediatamente después de su carga.

LIMPIEZA Y CONSERVACIÓN.

- Limpiar mantener el aparato siempre limpio y libre de polvo.
- Limpiar con paño suave ligeramente humedecido.
- Nunca use productos de limpieza abrasivos.
- Mantener siempre la batería con carga aunque no lo use.
- Ubicarlo siempre en zonas secas, ambientes secos y libres de polvo.

ESPECIFICACIONES

Controlador de altavoz: 4"

Potencia Altavoz: 5W

Batería: 3.7V 1200mAh

Entrada DC: 5V/1A (Adaptador no incluido)

FM: 87,5~108,0 MHz


Distancia de transmisión: 10 m

Dimensiones: (An. x Al. x Pr.): 185 X 255 X 150 mm

Accesorios:

- Cable de carga (Usb a MicroUsb).

PANEL DE MANDOS

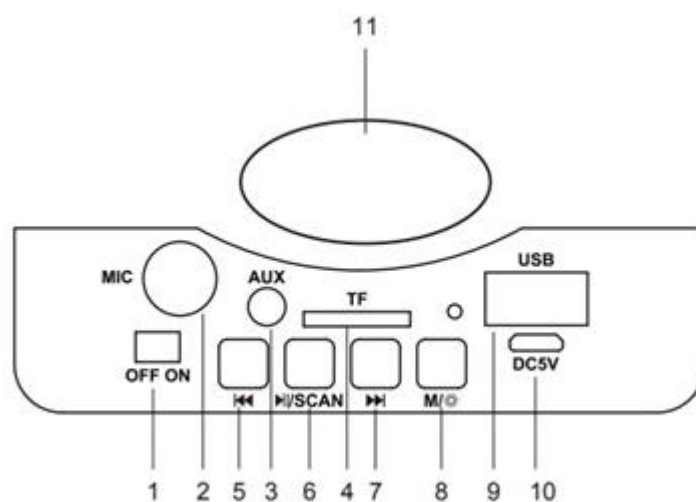

1. Apagar/encender
2. Entrada de micrófono
3. Entrada auxiliar
4. Puerto TF
5. Pista anterior
6. REPRODUCCIÓN/PAUSA/TWS
7. Siguiente pista
8. Modelo/Luz
9. Puerto USB
10. Carga de 5 V DC
11. Volumen

CARGA DE LA BATERÍA

- La batería se debe cargar al 100% antes del primer uso.
- El cargador utilizado debe ser de 5V y tener un amperaje de hasta 2A máximo.
- Cuando se enchufa a cargar se enciende un piloto rojo indicando "cargando".
El piloto se apaga cuando la carga está completa.
- Nunca se debe interrumpir la carga una vez enchufado a cargar.
- El tiempo de carga dependerá del amperaje del cargador utilizado.
- No encender el altavoz mientras está cargando.
- Si no va a utilizar el altavoz durante un tiempo, debe mantener a la batería con carga.
Cargar la batería al menos una vez al mes.
Si la batería se queda sin carga puede averiarse.

CONECTAR A DISPOSITIVO BLUETOOTH

Encienda el altavoz y encienda su dispositivo móvil Bluetooth, luego busque el nombre del modelo de altavoz "GR-64" y selecciónelo para emparejarlo.
Una vez emparejado el Bluetooth, el altavoz se conectará automáticamente las próximas veces que se encienda.

MODOS BLUETOOTH

El altavoz entra directamente en modo Bluetooth al encenderlo. Después de emparejar el dispositivo, puede reproducir la música, presione brevemente ►|| para reproducir / pausar, presione ◀◀ y ▶▶ para anterior / siguiente canción.

FUNCIÓN TWS

1. Encienda dos altavoces GR-64 y asegúrese de que ambos altavoces estén en el modo Bluetooth.
2. No se conecte a ningún dispositivo Bluetooth.
3. Haga doble clic en el botón (6) "TWS" y saldrá un tono que significa que está en el modo de emparejamiento.
4. Emparejará ambas unidades después de unos segundos junto con un tono que sale después de conectarse correctamente.
5. Encienda los dispositivos Bluetooth y busque el nombre de emparejamiento de "GR-64" y toque para conectarlo.
6. Ahora puede reproducir la música desde sus dispositivos Bluetooth.

MODOS USB / TF

Inserte una tarjeta MicroSD en la ranura TF ó un pendrive en el puerto Usb, el altavoz leerá la música en formato MP3 automáticamente. Presione ►|| para Reproducir / Pausa, presione brevemente ◀◀ y ▶▶ para anterior o siguiente canción.

MODO RADIO FM

- Mantener presionado el botón ►|| para la búsqueda y el memorizado de emisoras.
- Una vez memorizadas las emisoras, pulsar ◀◀ y ▶▶ para anterior y siguiente.

NOTA:

Si la recepción de la emisora no es buena, conectar simplemente un cable MicroUsb suelto sin cargador y hará de antena mejorando la recepción de la señal FM.

MODO / LUZ (Botón 8)

Presione brevemente para cambiar de modo entre BT/FM/USB/TF/AUX.

Mantenga presionado para apagar la luz LED. (Puede cambiar la luz LED a cuatro efectos de visualización y modo apagado cuando se presiona prolongadamente este botón). Nota: No hay luz LED en el modo FM.

CONDICIONES DE GARANTÍA

- Este aparato está cubierto contra cualquier avería eléctrica por fallo del fabricante.
- La garantía cubre averías causadas por el propio sistema eléctrico del fabricante.
- En el ticket o factura deben aparecer los datos del aparato para ser documento válido.

- La garantía no cubre:

- Averías causadas por golpes o mal uso por negligencias del usuario.
- Daños estéticos.
- Cuando no se dispone de ticket o factura de compra.
- Cuando no se dispone de ticket, factura o tarjeta de garantía cumplimentada.

Nota.

Durante el período de garantía, la tienda donde compra el aparato es la responsable y encargada de gestionar y tramitar la garantía en caso de avería.

Debe ir a la tienda donde compró el aparato con su ticket o factura de compra.

NORMAS DE PROTECCIÓN DEL MEDIO AMBIENTE



Este aparato no se debe desechar con los residuos domésticos cuando finalice su durabilidad, sino que se debe ofrecer a un centro de reciclaje de aparatos eléctricos y electrónicos domésticos. Este símbolo en el aparato, manual de instrucciones y embalaje le avisa de este aspecto importante.

El/los materiales utilizados en este aparato se pueden reciclar. Mediante el reciclaje de electrodomésticos, usted contribuye a fomentar la protección del medioambiente. Consulte a sus autoridades locales información acerca del punto de recogida.



USER'S GUIDE

WIRELESS SPEAKER PORTABLE

GR-64

ATTENTION

- Read this manual carefully before using the appliance for the first time.
- Save this manual for future reference.
- If you lend or sell this device, it must be accompanied by this manual.

Dear Customer

We thank you very much for having purchased this GOROCK® product. Our main commitment is to provide excellent articles, maintaining the strictest quality controls and compliance with all applicable safety regulations, with the aim of presenting a perfect and safe product for home use.

SECURITY INSTRUCTIONS

- Keep the appliance dry at all times.
- Do not use in areas with humid environment.
- The appliance can be used by children from 8 years of age and by people with reduced physical, sensory or mental capabilities, or who have no experience or knowledge, if they are supervised or instructed in the safe use of the appliance and understand the risks involved.
- This appliance is not a game for children.
- It can only be repaired by an authorized technical service.
- Never use near where there may be water or other liquid.
- Do not use near aerosols, sprays or products with compressed gas.
- Do not use in bathtubs, showers or near tanks full of water.
- Forbidden to use the appliance near water or any other liquid.
- This appliance is for domestic and occasional use only.
- Unplug from power immediately after charging.

CLEANING AND PRESERVATION.

- Clean Keep the appliance always clean and free of dust.
- Clean with a soft, slightly damp cloth.
- Never use abrasive cleaning products.
- Always keep the battery charged even if you do not use it.
- Always locate it in dry areas, dry and dust-free environments.

SPECIFICATIONS

Speaker Driver: 4"

Speaker Power: 5W

Battery: 3.7V 1200mAh

DC input: 5V/1A (Adapter not included)

FM: 87.5~108.0MHz


Transmission distance: 10m

Dimensions: (W x H x D): 185 X 255 X 150 mm

Accessories:

- Charging cable (Usb to MicroUsb).

CONTROL PANEL

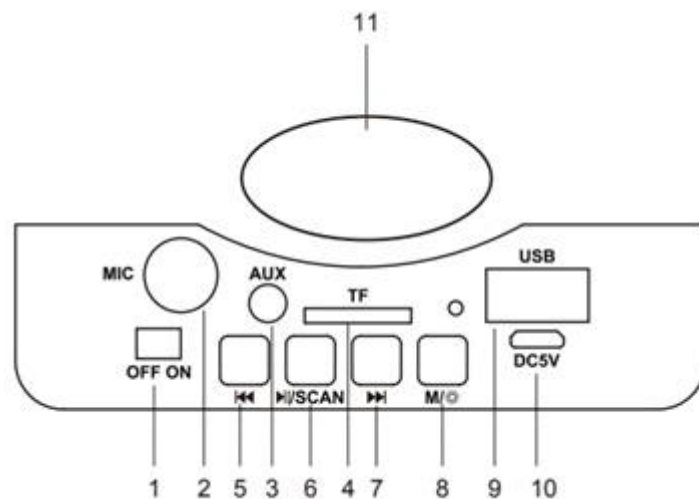

1. Power off/on
2. Microphone input
3. Auxiliary input
4. TF port (MicroSD Card)
5. Previous track
6. PLAY/PAUSE/TWS
7. Next track
8. Pattern/Light
9. USB port
10. DC 5V charging
11. Volume

BATTERY CHARGE

- The battery must be charged to 100% before first use.
- The charger used must be 5V and have an amperage of up to 2A maximum.
- When plugged in to charge, a red light comes on indicating "charging".
The pilot light goes out when charging is complete.
- Charging should never be interrupted once plugged in to charge.
- The charging time will depend on the amperage of the charger used.
- Do not turn on the speaker while it is charging.
- If you are not going to use the speaker for a while, you should keep the battery charged.
Charge the battery at least once a month.
If the battery runs out of charge it can be damaged.

CONNECT TO BLUETOOTH DEVICE

Turn on the speaker and turn on your Bluetooth mobile device, then search for the speaker model name "GR-64" and select it to pair.
Once the Bluetooth is paired, the speaker will automatically connect the next times it is turned on.

BLUETOOTH MODE

The speaker directly enters Bluetooth mode when you turn it on. After pairing the device, you can play the music, short press ►|| to play/pause, press ◀◀ and ▶▶ to previous/next song.

TWS FUNCTION

1. Powered on two GR-64 speakers and make sure that both speakers are on the Bluetooth mode.
2. Don't connect to any Bluetooth devices.
3. Double click the "TWS" button (6), and it will have a tone coming out that means in the pairing mode.
4. It will pair both units together after a few seconds along with a tone coming out after connected successfully.
5. Turn on the Bluetooth devices and searched the pairing name of "GR-64" and tap to connect it.
6. Now you can play the music from your Bluetooth devices.

USB/TF MODE

Insert a MicroSD card into the TF slot or a pen drive into the USB port, the speaker will read the music in MP3 format automatically. Press ►|| to Play / Pause, short press ◀◀ and ▶▶ to previous or next song.

FM RADIO MODE

- Long press ►|| to search and store stations.
- Once the stations are memorized, press ◀◀ and ▶▶ to previous and next.

NOTE:

If the reception of the station is not good, simply connect a MicroUsb cable loose without a charger and it will act as an antenna, improving the reception of the FM signal.

MODE / LIGHT (Button 8)

Short press to switch mode between BT/FM/USB/TF/AUX.

Long press to turn off the LED light. (You can switch the LED light to four display effects and off mode when you long press this button.)

Note: There is no LED light in FM mode.

WARRANTY CONDITIONS

- This appliance is covered against any electrical breakdown due to manufacturer's fault.
- The warranty covers breakdowns caused by the manufacturer's own electrical system.
- The device data must appear on the ticket or invoice to be a valid document.
- The guarantee does not cover:
 - Faults caused by blows or misuse due to user negligence.
 - Physical damages.
 - When there is no ticket or purchase invoice.
 - When there is no completed ticket, invoice or warranty card.

Note.

During the warranty period, the store where you buy the appliance is responsible and in charge of managing and processing the guarantee in the event of a breakdown. You must go to the store where you bought the device with your ticket or purchase invoice.

GUIDELINES FOR PROTECTION OF THE ENVIRONMENT



This appliance should not be put in to the domestic garbage at the end of its durability, but must be offered at a central point for their cycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and pack again put your attention to this important issue.

The materials used in this appliance can be recycled. By recycling of used domestic appliances, you contribute important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.



GR-64



8 436588 778611



www.thulos.com

info@grupothulos.com

Servicio Técnico / Technical Service: sat@grupothulos.com