



RECORTADORA MODELO VINTAGE

TH-CP112

ESPECIFICACIONES

- Hoja de acero de carbono.
- Cuerpo de metal.
- Potencia: 5W.
- Batería Recargable de 1200 mAh.
- Cargador de batería externo.
- Tiempo de carga: 3 horas.
- Autonomía: 1 hora.

ADVERTENCIAS

- Mantener seca la máquina en todo momento.
- No usar en zonas con ambiente húmedo.
- No pueden usarla niños ni personas con capacidades reducidas que no entiendan su funcionamiento y riesgos.
- Este aparato no es un juego para niños.

PRECAUCIONES

- Limpiar y engrasar siempre la máquina justo después de cada uso.
- Nunca usar productos abrasivos, solamente agua y jabón neutro.
- Nunca sumergir ninguna de las partes en agua u otro líquido.
- Mantener fuera del alcance de los niños.
- No tocar las partes en movimiento durante su uso.

CARGA



- Desenroscar el botón de la parte de abajo.
- Sacar la batería del compartimento.




Botón ON/OFF




- Poner la batería en el cargador externo respetando la polaridad.
- Conectar el cargador a una toma de 5V-1A, el cargador de su móvil puede ser compatible.
- Se enciende una luz en el cargador que será roja cuando esta cargando y verde cuando la carga se ha completado.

PONER Y QUITAR LOS PEINES DE CORTE

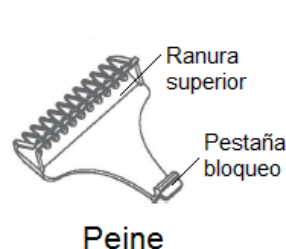


Peine

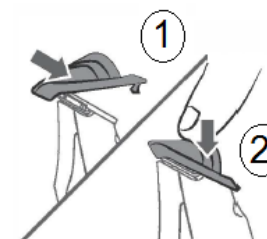

1

2

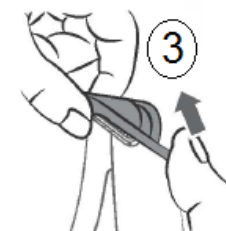

3

1. Introducir la cuchilla en la ranura superior del peine.
2. Presionar hacia abajo a la pestaña de bloqueo hasta un click.
3. Para quitar el peine, tirar hacia fuera de la pestaña de bloqueo.

LIMPIEZA Y MANTENIMIENTO

- Limpiar y engrasar la máquina siempre justo después de cada uso.
- Quitar el peine, quitar los restos de pelo con el cepillo tanto del peine como de la cuchilla.
- Engrasar la cuchilla. Ponerla en funcionamiento sin el peine, echar unas gotas de aceite lubricante a las cuchillas, esperar unos segundos y apagar. Quitar la batería y guardar hasta el próximo uso.



TRIMMER VINTAGE MODEL

TH-CP112

SPECIFICATIONS

- Carbon steel blade.
- Metal body.
- Power: 5W.
- Rechargeable 1200 mAh battery.
- External battery charger.
- Charging time: 3 hours.
- Autonomy: 1 hour.

WARNINGS

- Keep the machine dry at all times.
- Do not use in areas with a humid environment.
- It cannot be used by children or people with reduced capacities who do not understand its operation and risks.
- This appliance is not a game for children.

CAUTIONS

- Always clean and grease the machine just after each use.
- Never use abrasive products, only water and neutral soap.
- Never immerse any of the parts in water or other liquid.
- Keep out of the reach of children.
- Do not touch the moving parts during use.



CHARGE




- Unscrew the button at the bottom.
- Remove the battery from the compartment.



- Put the battery in the external charger respecting the polarity.
- Connect the charger to a 5V-1A socket, your mobile charger may be compatible.
- The light of the charger will be red when is charging and green when charging is complete.

PUT ON AND REMOVE CUTTING COMBS

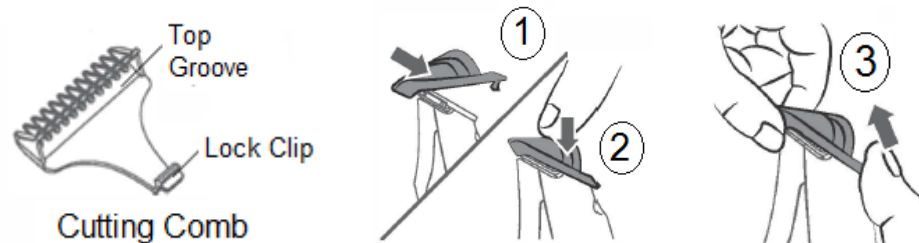

1. Insert the blade into the upper groove of the comb.
2. Press down on the locking clip until it clicks.
3. To remove the comb, pull out the locking clip.

CLEANING AND MAINTENANCE

- Always clean and grease the machine just after each use.
- Remove the comb, remove the remains of hair with the brush from both the comb and the blade.
- Grease the blade. Put it into operation without the comb, put a few drops of lubricating oil on the blades, wait a few seconds and turn off. Remove the battery and store until next use.