



SECADOR DE PELO (1500W)



MANUAL DE INSTRUCCIONES

TH – HD807

ATENCIÓN

- Leer detenidamente este manual de instrucciones antes de usar el aparato.
- Guardar este manual para futuras consultas.
- Si presta el aparato a terceras personas debe acompañarlo de este manual.
- Incumplir las instrucciones de este manual será motivo de anulación de garantía.

Estimado cliente:

Agradecemos la confianza depositada en nosotros al adquirir este producto Thulos. Nuestro principal empeño es ofrecer artículos excelentes, manteniendo los más estrictos controles de calidad y cumpliendo todas las normativas vigentes de seguridad, con el objetivo de presentar un producto perfecto y seguro para el uso doméstico.

INSTRUCCIONES DE SEGURIDAD IMPORTANTES

PELIGRO

Para reducir el riesgo de descarga eléctrica:

- Nunca utilizar el secador en zonas con condensación de vapor.
- Nunca tocar el aparato con las manos mojadas ni cuerpo mojado.
- No sumergir el cable de alimentación ni el secador en agua.
- Nunca usar en la ducha ni en zonas donde pueda salpicar agua.
- No usar en zonas con ambiente húmedo tales como en baños después de la ducha.
- No utilice cables de extensión con este producto.
- Nunca coloque el producto donde pueda caerse o ser empujado a una bañera o lavabo.
- No coloque ni deje caer agua, productos u otros líquidos mientras está enchufado a corriente.
- Siempre desenchufar de la toma de corriente inmediatamente después de su uso.
- No desmonte el producto y evite temperaturas por encima de 100°C (212°F).

ADVERTENCIAS DE SEGURIDAD

- Este aparato está diseñado solo y exclusivamente para uso doméstico.
- Antes de enchufar el secador, tener bien seco el cuerpo y las manos.
- Nunca utilizar el secador con el cuerpo ni las manos húmedas.
- El aparato nunca debe ser dejado sin atención cuando está enchufado.
- Requiere supervisión cuando es usado por niños o personas con capacidades reducidas que no entiendan o desconozcan el peligro y riesgos al que se exponen usando este aparato.
- Use este aparato solo para el uso previsto como se describe en este manual.
- Mantenga el cable alejado de superficies calientes.
- Nunca usar este aparato si el cable o el enchufe están dañados, si percibe alguna anomalía en su funcionamiento, si se ha caído o dañado, o si se ha caído al agua.
- Nunca inserte objetos en ninguna de las aberturas del aparato.
- No utilizar al aire libre ni cerca de aerosoles (sprays) ó donde se está administrando oxígeno.
- Almacene este aparato y el cable en áreas libres de humedad, zonas secas libres de polvo.
- Asegúrese de que el cable está desconectado de la corriente para almacenar.
- Para obtener protección adicional, le recomendamos que instale un dispositivo de corriente residual (RCD) con una corriente de funcionamiento residual nominal que no exceda los 30 mA en el circuito eléctrico que alimenta el baño. Pídale consejo a su instalador.

COMPONENTES Y ACCESORIOS.



DESCRIPCIÓN DE COMPONENTES

1. PULSADOR DE AIRE FRÍO.
2. SELECTOR MULTIFUNCIÓN (Posición "0", apagado)
3. SELECTOR MULTIFUNCIÓN (Posición solo aire)
4. SELECTOR MULTIFUNCIÓN (Posición aire templado)
5. SELECTOR MULTIFUNCIÓN (Posición aire caliente)
6. REJILLA TRASERA CON FILTRO (Desmontable para limpieza).

Funcionamiento.

1. Secar bien el pelo con una toalla.
2. Asegúrese de tener el cuerpo y las manos bien secos.
3. Extender o desliar todo el cable.
4. Asegúrese de que la rejilla trasera (6) está totalmente limpia antes de usar.
5. Enchufar a corriente eléctrica. No utilizar extensores de cables de corriente.
6. Seleccionar la función deseada con el selector multifunción.
7. Pulse y mantenga pulsado el botón de aire frío (1) cuando quiera aire frío.
Suelte el botón y volverá al aire caliente seleccionado anteriormente.

NOTA.

- Durante el secado, el secador puede dejar de funcionar repentinamente. Esto se debe al sistema de seguridad anti sobrecalentamiento. En este caso debe apagarlo, desconectarlo y dejarlo enfriar unos minutos. Una vez se ha enfriado, el secador vuelve a funcionar correctamente de nuevo.

Consejos Y Advertencias.

- No utilizar el secador en zonas con condensación de vapor.
- No utilizar el secador en zonas con ambiente húmedo.
- Mantener siempre limpia la rejilla trasera del secador.
- El selector multifunción debe estar en posición "0" antes de enchufar y desenchufar el secador.
- Nunca tapar las entradas ni salidas de aire.
- Nunca ponerlo sobre superficies mojadas ó húmedas.
- Desconectar de la corriente inmediatamente después de cada uso.

Limpieza del Secador de Pelo.

- Desconecte el cable de corriente.
- Retire la rejilla trasera y límpiela, quite los pelos ó acumulación de pelusas ó polvo.
- Vuelva a colocar la rejilla.
- Limpie también la salida de aire delantera quitando posibles pelos.

PRECAUCIÓN:

- Nunca limpiar el secador en funcionamiento y siempre desenchufado de la corriente.
- Nunca utilice productos de limpieza abrasivos ni estropajos.
- Nunca sumergir el secador en agua u otro líquido.
- Use un paño suave y seco para limpiar el exterior del secador.

Almacenamiento.

- Asegúrese que está apagado y desenchufado de la corriente eléctrica.
- Limpie siempre el secador después de cada uso, antes de guardarlo.
- Enrollar el cable de forma holgada sin tirantes.
- Guarde el secador y sus accesorios en un lugar seguro, seco y libre de polvo.
- No ponga el secador en lugares donde pueda caerse o dañarse.

Especificaciones.

- Entrada de corriente: 220V-240V 50/60Hz.
- Potencia total: 1500W.
- Potente motor DC.
- 3 velocidades.
- 3 niveles de temperatura.
- Botón de aire frío.
- Protección anti sobrecalentamiento.

Condiciones De Garantía.

- El aparato está cubierto contra cualquier defecto funcional de fábrica.
- La garantía cubre cualquier avería electromecánica siempre y cuando haya sido causada por fallo del propio sistema del fabricante.
- La garantía no cubre daños estéticos, golpes ni averías por mal uso.
- Cualquier señal o manipulación del aparato por terceros, será motivo de anulación de garantía.

Nota.

Durante el período de garantía, el establecimiento que le vende el producto es el responsable de gestionar la garantía.

NORMAS DE PROTECCIÓN DEL MEDIO AMBIENTE



Este aparato no se debe desechar con los residuos domésticos cuando finalice su durabilidad, sino que se debe ofrecer a un centro de reciclaje de aparatos eléctricos y electrónicos domésticos. Este símbolo en el aparato, manual de instrucciones y embalaje le avisa de este aspecto importante.

Los materiales utilizados en este aparato se pueden reciclar. Mediante el reciclaje de electrodomésticos, usted contribuye a fomentar la protección del medioambiente. Consulte a sus autoridades locales para obtener información acerca del punto de recogida.



HAIR DRYER (1500W)



INSTRUCTIONS MANUAL

TH – HD807

ATTENTION

- Read this instruction manual carefully before using the appliance.
- Keep this manual for future reference.
- If you lend the device to third parties, you must accompany it with this manual.
- Failure to comply with the instructions in this manual will be grounds for voiding the warranty.

Dear Customer:

We appreciate the confidence placed in us when purchasing this Thulos product. Our main commitment is to offer excellent items, maintaining the strictest quality controls and complying with all current safety regulations, in order to present a perfect and safe product for domestic use.

IMPORTANT SAFETY INSTRUCTIONS

DANGER.


To reduce the risk of electric shock:

- Never use the dryer in areas with steam condensation.
- Never touch the appliance with wet hands or wet body.
- Do not immerse the power cord or the dryer in water.
- Never use in the shower or in areas where water can splash.
- Do not use in areas with a humid environment such as in bathrooms after showering.
- Do not use extension cords with this product.
- Never place the product where it can fall or be pushed into a bathtub or sink.
- Do not place or drop water, products or other liquids while it is plugged in.
- Always unplug from the outlet immediately after use.
- Do not disassemble the product and avoid temperatures above 100°C (212°F).

WARNINGS.

- This appliance is designed only and exclusively for domestic use.
- Before plugging in the dryer, keep your body and hands very dry.
- Never use the dryer with your body or hands wet.
- The appliance should never be left unattended when it is plugged in.
- Requires supervision when used by children or people with reduced capacities who do not understand or are unaware of the danger and risks to which they are exposed using this device.
- Use this appliance only for its intended use as described in this manual.
- Keep the cord away from hot surfaces.
- Never use this appliance if the cord or plug is damaged, if you notice any abnormality operation, if it has been dropped or damaged, or if it has been dropped into water.
- Never insert objects into any of the openings on the appliance.
- Do not use outdoors or near aerosols (sprays) or where oxygen is being administered.
- Store this appliance and cord in areas free from moisture, dry areas free from dust.
- Make sure the cord is unplugged from power to store.
- For additional protection, we recommend that you install a residual current device (RCD) with a nominal residual operating current not exceeding 30 mA in the electrical circuit that powers the bath. Ask your installer for advice.

COMPONENTS AND ACCESSORIES.

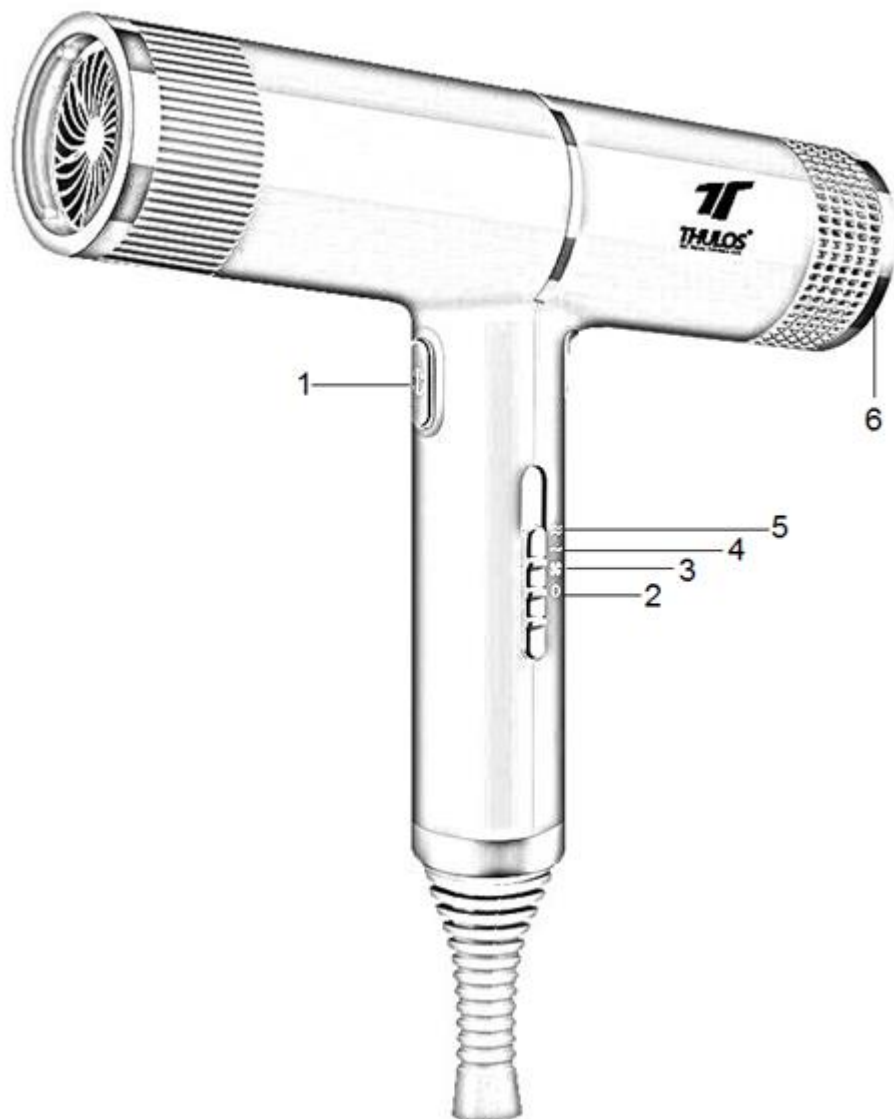

Description of components:

1. PUSH BUTTON OF COOL AIR.
2. MULTIFUNCTION SELECTOR (Position "0" Off).
3. MULTIFUNCTION SELECTOR (Only wind position).
4. MULTIFUNCTION SELECTOR (Warm wind position).
5. MULTIFUNCTION SELECTOR (Large hot air position).
6. REAR GRILLE WITH FILTER (Removable for cleaning).

Operation.

1. Dry hair well with a towel.
2. Make sure your hands and body are dry.
3. Extend or slide the entire cable.
4. Make sure the rear grill (6) is completely clean before use.
5. Plug in to electrical current. Do not use power cord extenders.
6. Select the desired function with the multifunction selector.
7. Press and hold the cool air button (1) when you want cool air.
Release the button and you will return to the previously selected hot air.

NOTE.

- During drying, the dryer may suddenly stop working.
This is due to the anti-overheating safety system.
In this case, you must turn it off, unplug it and let it cool down for a few minutes.
Once it has cooled down, the dryer works properly again.

Tips and Warnings.

- Do not use the dryer in areas with steam condensation.
- Do not use the dryer in areas with a humid environment.
- Always keep the rear rack of the dryer clean.
- The speed button must be in position "0" before plugging in and unplugging the dryer.
- Never cover the air inlets or outlets.
- Never put it on wet or damp surfaces.
- Disconnect from the mains immediately after each use.

Cleaning the Hair Dryer.

- Disconnect the power cord.
- Remove the rear grill and clean it, remove hairs or accumulation of lint or dust.
- Replace the grill.
- Also clean the front air outlet removing any hairs.

CAUTION:

- Never clean the dryer while it is running and always unplugged from the power.
- Never use abrasive cleaners or scourers.
- Never immerse the dryer in water.
- Use a soft, dry cloth to clean the exterior of the dryer.

Storage.

- Make sure it is turned off and unplugged from the electrical current.
- Always clean the dryer after each use, before putting it away.
- Wind the cable loosely without tension.
- Store the dryer and its accessories in a safe, dry and dust-free place.
- Do not put the dryer in places where it may fall or be damaged.

Specifications.

- Power input: 220V-240V 50 / 60Hz.
- Total power: 1500W.
- Powerful DC motor.
- 3 speeds.
- 3 temperature levels.
- Cold air button.
- Anti-overheating safety system.

WARRANTY CONDITIONS.

- The device is covered against any factory functional defect.
- The warranty covers any electromechanical breakdown as long as
has been caused by failure of the manufacturer's own system.
- The warranty does not cover cosmetic damage, bumps or breakdowns due to misuse.
- Any signal or manipulation of the device by third parties,
It will be a reason for cancellation of the guarantee.

Note.

During the warranty period, the establishment that sells you the product is responsible for managing the warranty.

GUIDELINES FOR PROTECTION OF THE ENVIRONMENT



This appliance should not be put in to the domestic garbage at the end of its durability, but must be offered at a central point for there cycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and pack again put your attention to this import an tissue.

The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute important push to the protection of our environment. Ask your local authorities for in formation regarding the point of recollection.



SECADOR DE PELO
HAIR DRYER
TH-HD807 / 1500W



GRIS / GRAY



MORADO / PURPLE

www.thulos.com

Servicio Técnico / Technical Service: sat@grupothulos.com

Información / Information: thulos@thulos.com

