



SACACORCHOS ELÉCTRICO




TH-WO1133



PROTECCIÓN Y SEGURIDAD.

- No exponga el aparato a altas temperaturas, campos magnéticos ni humedad.
- Si el aparato se moja, secar inmediatamente y nunca sumergir en agua.
- No utilizar el aparato cerca de gases inflamables ni cerca de explosivos.
- No usar para otro uso que no sea el indicado.
- Aparato únicamente para uso doméstico.
- Usar el aparato sobre superficies bien limpias.
- Nunca tocar el mecanismo ni la espiral de corte del aparato.
- Sujetar siempre de la carcasa exterior.
- No intente abrir botellas si no funciona correctamente.
- Este aparato no es apto para niños. No es un juego para niños.
- Mantener fuera del alcance de los niños y personas con discapacidad.

PARTES DEL APARATO

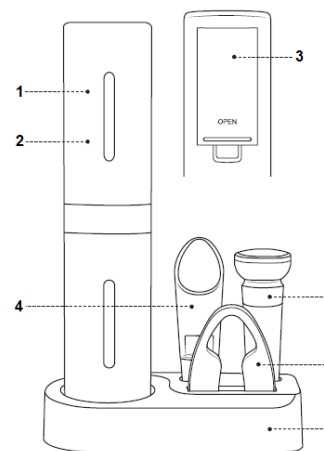


1. Botón para soltar el corcho.
2. Botón de extracción del corcho.
3. Tapa de baterías.
4. Vertedor para botellas.
5. Tapón de vacío.
6. Accesorio para cortar el envoltorio de aluminio de protección del corcho.
7. Base organizadora.

FUNCIONAMIENTO (Funciona con 4 pilas del tipo AA, no incluidas)



Antes de sacar el corcho de la botella, debe cortar el envoltorio de aluminio.
Utilizar el accesorio cortador para cortar el envoltorio protector.



- Colocar el abridor eléctrico encima de la botella de vino.
- Mantenerlo en posición vertical respecto a la botella.
- Sosteniendo firmemente presione el botón inferior (2).
- La espiral gira en sentido horario para entrar en el corcho.
- Después tire gradualmente para sacar el corcho de la botella.
- Si lo sostiene doblado ó en ángulo, no saldrá correctamente.



Para extraer el corcho del aparato:

- Sujetar el corcho con cuidado.
- Presionar el botón (1), la espiral gira en sentido anti-horario.
- Tirar gradualmente del corcho mientras gira la espiral.

PRECAUCIÓN CON LAS BATERÍAS (PILAS)

- Especial atención y respetar siempre la polaridad al poner las baterías.
- Nunca mezclar baterías de distinta marca.
- Nunca mezclar baterías entre nuevas y usadas.
- Utilizar siempre baterías alcalinas.
- Las baterías agotadas deben retirarse del aparato.
- Si no va a utilizar el aparato durante largo tiempo, retirar las baterías.



ELECTRIC CORKSCREW




TH-WO1133



PROTECTION AND SECURITY.

- Do not expose the device to high temperatures, magnetic fields or humidity.
- If the appliance gets wet, dry immediately and never immerse in water.
- Do not use the device near flammable gases or near explosives.
- Do not use for other use than the one indicated.
- Apparatus only for domestic use.
- Use the appliance on clean surfaces.
- Never touch the mechanism or the cutting spiral of the appliance.
- Always take of the outer casing.
- Do not try to open bottles if it does not work correctly.
- This device is not suitable for children. It is not a game for children.
- Keep out of reach of children and people with disabilities.

PARTS OF THE APPLIANCE

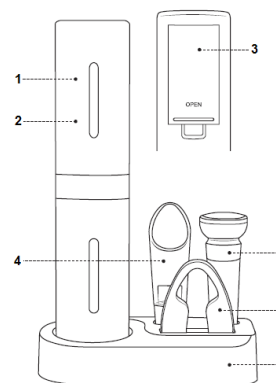


1. Button to release the cork.
2. Cork extraction button.
3. Battery cover.
4. Bottle pourer.
5. Vacuum plug.
6. Accessory to cut the wrapper aluminum cork protection.
7. Base organizer.

OPERATION (Works with 4 AA batteries, not included)



Before removing the cork from the bottle, you must cut the aluminum wrapper.
Use the cutter accessory (4) to cut the protective wrapping.



- Place the electric opener on top of the wine bottle.
- Keep it in vertical position with respect to the bottle.
- Holding firmly press the lower button (2).
- The spiral rotates clockwise to enter the cork.
- Then pull gradually to remove the cork from the bottle.
- If you hold it bent or angled, the cork will not come out correctly.



To extract the cork from the device:

- Hold the cork with care.
- Press the button (1), the spiral rotates counterclockwise.
- Pull the cork gradually while the spiral rotates.

CAUTION WITH BATTERIES

- Special attention and always respect the polarity when putting the batteries.
- Never mix batteries of different brand.
- Never mix batteries between new and used.
- Always use alkaline batteries.
- The exhausted batteries must be removed from the device.
- If you are not going to use the device for a long time, remove the batteries.