


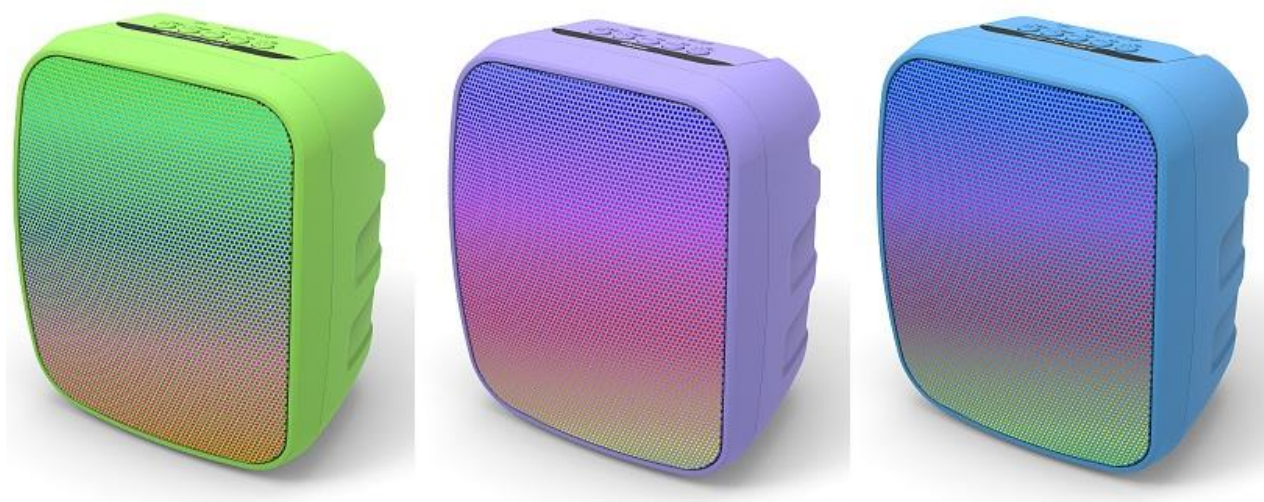

MANUAL DE INSTRUCCIONES

ALTAVOZ INALÁMBRICO PORTÁTIL

GR-60

ATENCIÓN

- Leer atentamente este manual antes de usar el aparato por primera vez.
- Guardar este manual para futuras consultas.
- Si presta o vende este aparato debe ir acompañado de este manual.

Estimado Cliente:

Agradecemos la confianza depositada en nosotros al adquirir este producto GOROCK®. Nuestro principal empeño es ofrecer artículos excelentes, manteniendo los más estrictos controles de calidad y cumpliendo todas las normativas vigentes de seguridad, con el objetivo de presentar un producto perfecto y seguro para el uso doméstico.


ESPECIFICACIONES

- Versión inalámbrica: 5.2
- Tamaño del altavoz: 3"
- Potencia de salida: 6W
- Respuesta de frecuencia: 60Hz-10KHz
- Alcance inalámbrico: 10 metros
- Memoria máxima admitida: USB / TF: Hasta 32 GB.
- Carga USB: DC 5V
- Capacidad de la batería: 500 mAh
- Puerto de carga: MicroUsb.
- Tiempo cargando: Dependerá del amperaje del cargador utilizado.
- Autonomía: Dependerá del volumen y modo utilizado.

Accesorios:

- Cable de carga (Usb a MicroUsb).

PANEL DE MANDOS

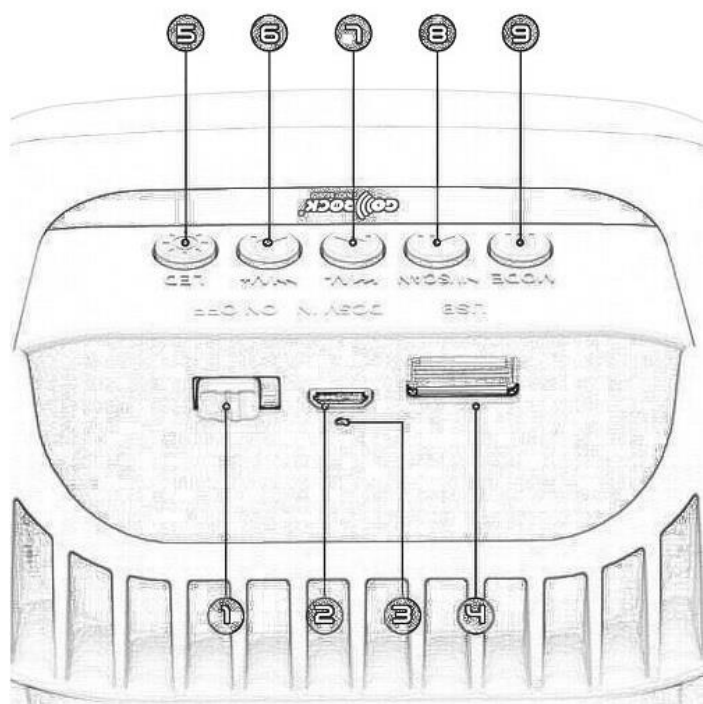

1. Interruptor On/Off.
2. Puerto de carga MicroUsb.
3. Luz indicadora de "cargando".
4. Puerto Usb.
5. Modos de luz.
6. Pista + / Volumen +.
7. Pista - / Volumen -.
8. Play / Pause / Scan.
9. Modo Altavoz.

CARGA DE LA BATERÍA

- La batería se debe cargar al 100% antes del primer uso.
- El cargador utilizado debe ser de 5V y tener un amperaje de hasta 2A máximo.
- Cuando se enchufa a cargar se enciende un piloto rojo indicando "cargando".
El piloto se apaga cuando la carga está completa.
- Nunca se debe interrumpir la carga una vez enchufado a cargar.
- El tiempo de carga dependerá del amperaje del cargador utilizado.
- No encender el altavoz mientras está cargando.
- Si no va a utilizar el altavoz durante un tiempo, debe mantener a la batería con carga.
Cargar la batería al menos una vez al mes.
Si la batería se queda sin carga puede averiarse.

CONECTAR A DISPOSITIVO BLUETOOTH

Encienda el altavoz y encienda su dispositivo móvil Bluetooth, luego busque el nombre del modelo de altavoz "GR-60" y selecciónelo para emparejarlo.
Una vez emparejado el Bluetooth, el altavoz se conectará automáticamente las próximas veces que se encienda.

MODO BLUETOOTH

El altavoz entra directamente en modo Bluetooth al encenderlo. Después de emparejar el dispositivo, puede reproducir la música, presione brevemente ►|| para reproducir / pausar, presione ◀◀ y ▶▶ para anterior / siguiente canción.
Mantener pulsado - / + para bajar o subir el volumen.

MODO USB

Inserte un pendrive en el puerto Usb, el altavoz leerá la música en formato MP3 automáticamente. Presione ►|| para Reproducir / Pausa, presione brevemente ◀◀ y ▶▶ para anterior o siguiente canción.
Mantener pulsado - / + para bajar ó subir volumen.

MODO RADIO FM

- Presione ►|| para la búsqueda y el memorizado de emisoras.
- Una vez memorizadas las emisoras, pulsar ◀◀ y ▶▶ para anterior y siguiente.
- Mantener pulsado - / + para bajar o subir el volumen.

NOTA:

Si la recepción de la emisora no es buena, conectar simplemente un cable MicroUsb suelto sin cargador y hará de antena mejorando la recepción de la señal FM.

CONDICIONES DE GARANTÍA

- Este aparato está cubierto contra cualquier avería eléctrica por fallo del fabricante.
- La garantía cubre averías causadas por el propio sistema eléctrico del fabricante.
- En el ticket o factura deben aparecer los datos del aparato para ser documento válido.

- La garantía no cubre:

- Averías causadas por golpes o mal uso por negligencias del usuario.
- Daños estéticos.
- Cuando no se dispone de ticket o factura de compra.
- Cuando no se dispone de ticket, factura o tarjeta de garantía cumplimentada.

Nota.

Durante el período de garantía, la tienda donde compra el aparato es la responsable y encargada de gestionar y tramitar la garantía en caso de avería.


Debe ir a la tienda donde compró el aparato con su ticket o factura de compra.

NORMAS DE PROTECCIÓN DEL MEDIO AMBIENTE



Este aparato no se debe desechar con los residuos domésticos cuando finalice su durabilidad, sino que se debe ofrecer a un centro de reciclaje de aparatos eléctricos y electrónicos domésticos. Este símbolo en el aparato, manual de instrucciones y embalaje le avisa de este aspecto importante.

El/los materiales utilizados en este aparato se pueden reciclar. Mediante el reciclaje de electrodomésticos, usted contribuye a fomentar la protección del medioambiente. Consulte a sus autoridades locales información acerca del punto de recogida.

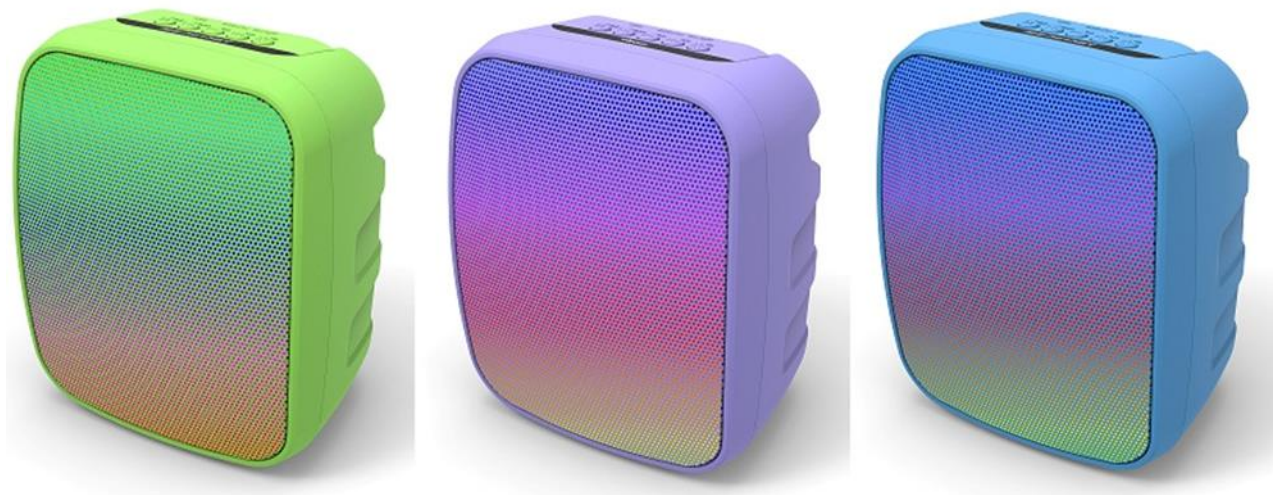

USER'S GUIDE

WIRELESS SPEAKER PORTABLE

GR-60

ATTENTION

- Read this manual carefully before using the appliance for the first time.
- Save this manual for future reference.
- If you lend or sell this device, it must be accompanied by this manual.

Dear Customer

We thank you very much for having purchased this GOROCK® product. Our main commitment is to provide excellent articles, maintaining the strictest quality controls and compliance with all applicable safety regulations, with the aim of presenting a perfect and safe product for home use.


SPECIFICATIONS

- Wireless version: 5.2
- Speaker size: 3"
- Output power: 6W
- Frequency response: 60Hz-10KHz
- Wireless range: 10 meters
- Maximum supported memory: USB / TF: Up to 32 GB.
- USB charging: DC 5V
- Battery capacity: 500 mAh
- Charging port: MicroUsb.
- Charging time: It will depend on the amperage of the charger used.
- Autonomy: It will depend on the volume and mode used.

Accessories:

- Charging cable (Usb to MicroUsb).

CONTROL PANEL

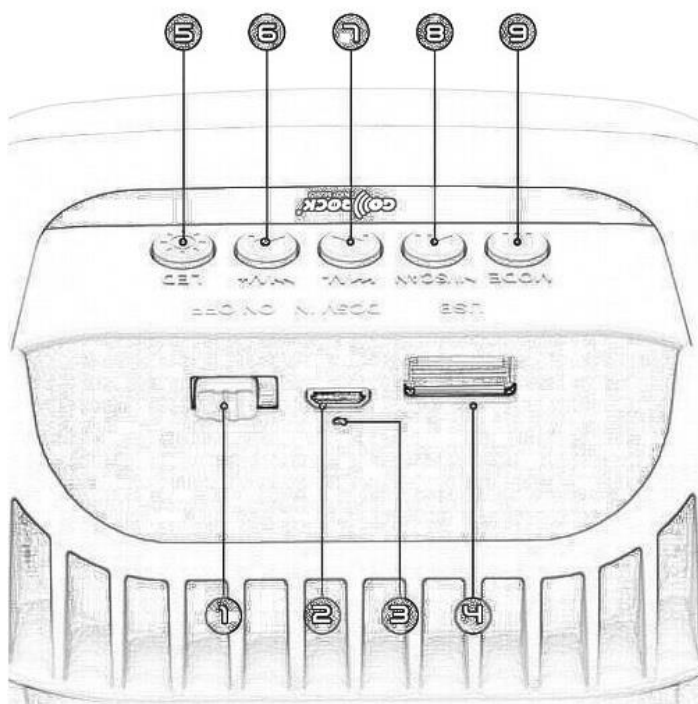

1. On/Off switch.
2. MicroUsb charging port.
3. "Charging" indicator light.
4. Usb port.
5. Light modes.
6. Track + / Volume +.
7. Track - / Volume -.
8. Play/Pause/Scan.
9. Speaker mode.

BATTERY CHARGE

- The battery must be charged to 100% before first use.
- The charger used must be 5V and have an amperage of up to 2A maximum.
- When plugged in to charge, a red light comes on indicating "charging".
The pilot light goes out when charging is complete.
- Charging should never be interrupted once plugged in to charge.
- The charging time will depend on the amperage of the charger used.
- Do not turn on the speaker while it is charging.
- If you are not going to use the speaker for a while, you should keep the battery charged.
Charge the battery at least once a month.
If the battery runs out of charge it can be damaged.

CONNECT TO BLUETOOTH DEVICE

Turn on the speaker and turn on your Bluetooth mobile device, then search for the speaker model name "GR-60" and select it to pair.
Once the Bluetooth is paired, the speaker will automatically connect the next times it is turned on.

BLUETOOTH MODE

The speaker directly enters Bluetooth mode when you turn it on. After pairing the device, you can play the music, short press ►|| to play/pause, press ◀◀ and ▶▶ to previous/next song.
Long press - / + to decrease or increase the volume.

USB MODE

Insert a pen drive into the USB port, the speaker will read the music in MP3 format automatically. Press ►|| to Play / Pause, short press ◀◀ and ▶▶ to previous or next song.
Long press - / + to decrease or increase volume.

FM RADIO MODE

- Press ►|| to search and store stations.
- Once the stations are memorized, press ◀◀ and ▶▶ to previous and next.
- Long press - / + to decrease or increase the volume.

NOTE:

If the reception of the station is not good, simply connect a MicroUsb cable loose without a charger and it will act as an antenna, improving the reception of the FM signal.

WARRANTY CONDITIONS

- This appliance is covered against any electrical breakdown due to manufacturer's fault.
- The warranty covers breakdowns caused by the manufacturer's own electrical system.
- The device data must appear on the ticket or invoice to be a valid document.
- The guarantee does not cover:
 - Faults caused by blows or misuse due to user negligence.
 - Physical damages.
 - When there is no ticket or purchase invoice.
 - When there is no completed ticket, invoice or warranty card.

Note.

During the warranty period, the store where you buy the appliance is responsible and in charge of managing and processing the guarantee in the event of a breakdown. You must go to the store where you bought the device with your ticket or purchase invoice.

GUIDELINES FOR PROTECTION OF THE ENVIRONMENT




This appliance should not be put in to the domestic garbage at the end of its durability, but must be offered at a central point for their cycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and pack again put your attention to this important issue.

The materials used in this appliance can be recycled. By recycling of used domestic appliances, you contribute important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

GO ROCK[®]

ENJOY MUSIC!

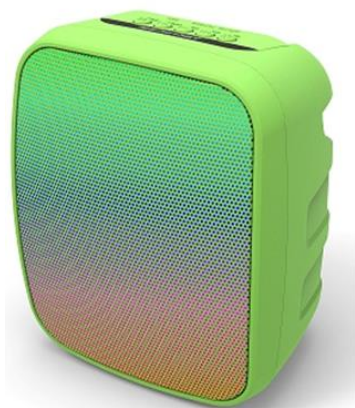

8 436588 778406

GR-60 GREEN / VERDE



8 436588 778390

GR-60 PURPLE / MORADO



8 436588 778383

GR-60 BLUE / AZUL



www.thulos.com

info@grupothulos.com

Servicio Técnico / Technical Service: sat@grupothulos.com