



## MAQUINA CORTAPELOS



## MANUAL DE INSTRUCCIONES

TH – CP1352

### **ATENCIÓN**

- Leer detenidamente este manual de instrucciones antes de usar el aparato.
- Guardar este manual para futuras consultas.
- Si presta el aparato a terceras personas debe acompañarlo de este manual.
- Incumplir las instrucciones de este manual será motivo de anulación de garantía.

## **Estimado cliente:**

Agradecemos la confianza depositada en nosotros al adquirir este producto Thulos. Nuestro principal empeño es ofrecer artículos excelentes, manteniendo los más estrictos controles de calidad y cumpliendo todas las normativas vigentes de seguridad, con el objetivo de presentar un producto perfecto y seguro para el uso doméstico.

## **INSTRUCCIONES DE SEGURIDAD IMPORTANTES**

### **PELIGRO**


#### **Para reducir el riesgo de descarga eléctrica:**

- Nunca utilizar el aparato en zonas con condensación de vapor.
- Nunca tocar el aparato con las manos mojadas ni cuerpo mojado.
- No sumergir el cable de alimentación ni el aparato en agua.
- Nunca usar en la ducha ni en zonas donde pueda salpicar agua.
- No usar en zonas con ambiente húmedo tales como en baños después de la ducha.
- No utilice cables de extensión con este producto.
- Nunca coloque el producto donde pueda caerse o ser empujado a una bañera o lavabo.
- No coloque ni deje caer agua, productos u otros líquidos mientras está enchufado a corriente.
- Siempre desenchufar de la toma de corriente inmediatamente después de su uso.
- No desmonte el producto y evite temperaturas por encima de 100°C (212°F).

## **ADVERTENCIAS DE SEGURIDAD**

- Este aparato está diseñado solo y exclusivamente para uso doméstico.
- Antes de enchufar el aparato, tener bien seco el cuerpo y las manos.
- Nunca utilizar el aparato con el cuerpo ni las manos húmedas.
- El aparato nunca debe ser dejado sin atención cuando está enchufado.
- Requiere supervisión cuando es usado por niños o personas con capacidades reducidas que no entiendan o desconozcan el peligro y riesgos al que se exponen usando este aparato.
- Use este aparato solo para el uso previsto como se describe en este manual.
- Mantenga el cable alejado de superficies calientes.
- Nunca usar este aparato si el cable o el enchufe están dañados, si percibe alguna anomalía en su funcionamiento, si se ha caído o dañado, o si se ha caído al agua.
- Nunca inserte objetos en ninguna de las aberturas del aparato.
- No utilizar al aire libre ni cerca de aerosoles (sprays) ó donde se está administrando oxígeno.
- Almacene este aparato y el cable en áreas libres de humedad, zonas secas libres de polvo.
- Asegúrese de que el cable está desconectado de la corriente para almacenar.
- Limpiar y engrasar el aparato siempre después de cada uso y guardarlo ya limpio y engrasado.
- Nunca tocar las cuchillas mientras la máquina esté enchufada a la corriente.
- Para cambiar un peine de corte por otro, hacerlo siempre con la máquina apagada.

## COMPONENTES Y ACCESORIOS.

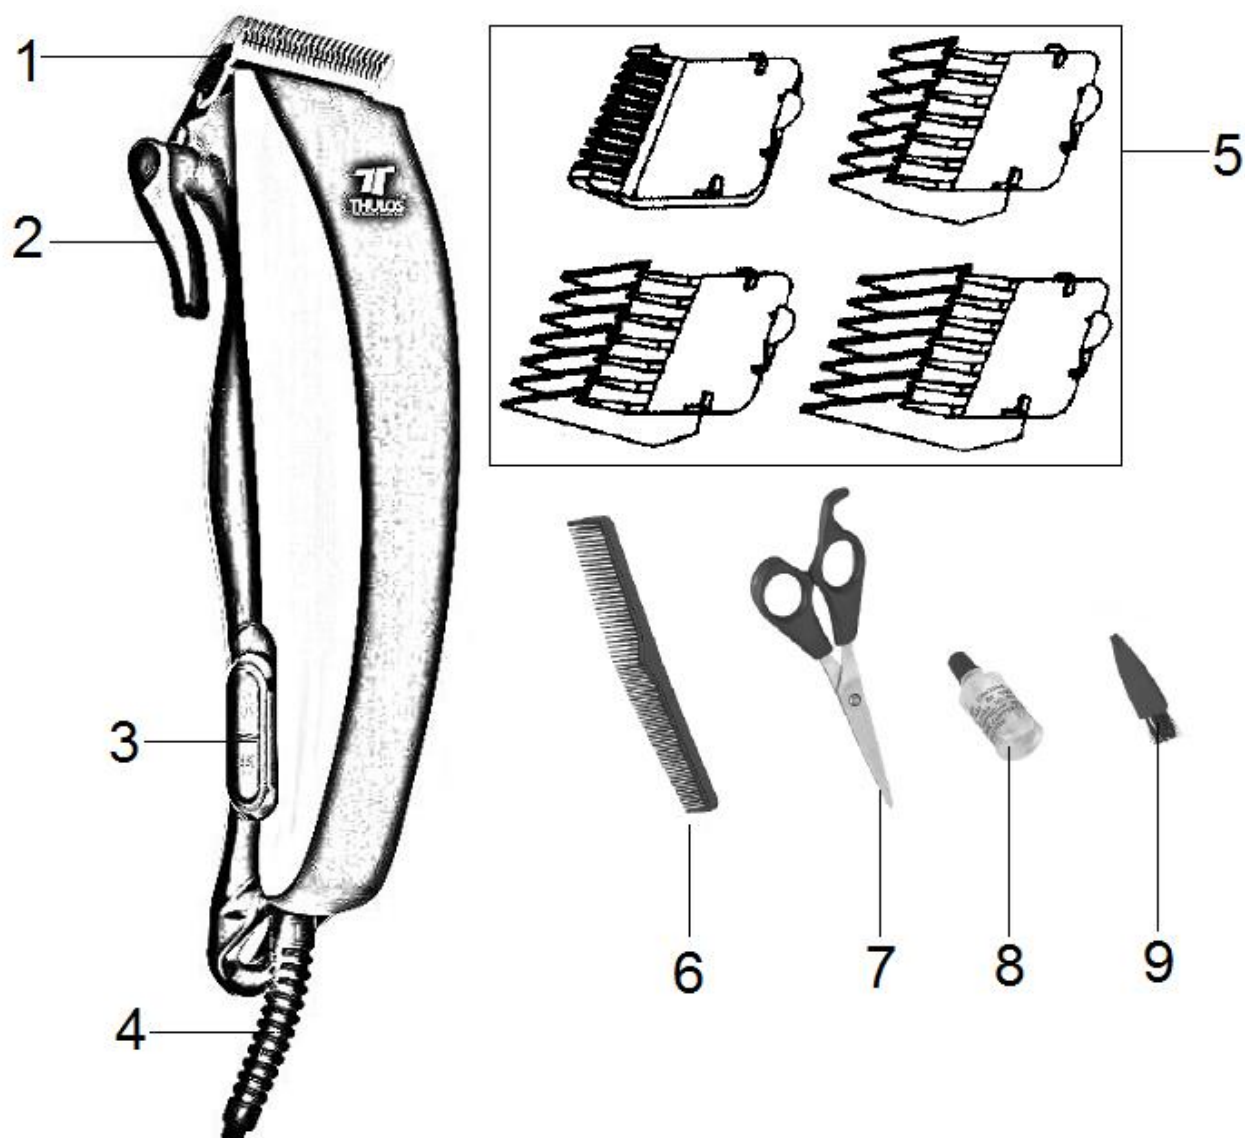

## DESCRIPCIÓN DE COMPONENTES

1. CONJUNTO DE CUCHILLAS.
2. PALANCA DE AJUSTE DE NIVEL DE CORTE.
3. BOTÓN ON/OFF.
4. CABLE DE ALIMENTACIÓN 220V.
5. PEINES DE CORTE 4 MEDIDAS ( 3mm / 6mm / 9mm / 12mm ).
6. PEINE.
7. TIJERAS.
8. ACEITE PARA LUBRICAR LAS CUCHILLAS DESPUÉS DE CADA USO.
9. CEPILLO PARA LIMPIEZA DESPUÉS DE CADA USO.

## Antes De Cada Uso.

- Revisar que las cuchillas están correctamente ajustadas.
- Asegurarse que las cuchillas están limpias y engrasadas.
- Inspeccionar que el cable de alimentación no tenga ningún daño.
- El pelo a cortar debe estar totalmente limpio y seco.

## Funcionamiento.



- Extender todo el cable de alimentación.
- Poner el peine de corte deseado.
- Antes de enchufar, asegurarse que el botón On/Off está en posición Off (Apagado).
- Enchufar a la corriente eléctrica.
- Encender la máquina con el botón On/Off.
- Empezar a cortar el pelo.
- Una vez terminado el corte de pelo, parar y desenchufar de la corriente eléctrica.

## Limpieza de la Máquina Cortapelos.

- Desconectar el cable de la corriente.
- Retirar el peine de corte si lo tiene puesto.
- Limpiar con el cepillo de limpieza para retirar los restos de pelos.
- Una vez ha limpiado los restos de pelo proceder a lubricar las cuchillas.

### LUBRICAR LAS CUCHILLAS:

- Enchufar la máquina a la corriente eléctrica.
- Encender la máquina.
- Con la máquina encendida, echar unas gotas de aceite lubricante en las cuchillas.
- Dejar encendida unos segundos que se lubriquen las cuchillas con el aceite.
- Apagar la máquina y desenchufar de la corriente eléctrica.

## **Almacenamiento.**

- Asegúrese que está apagado y desenchufado de la corriente eléctrica.
- Limpie el aparato tal y como se especifica en el apartado de limpieza.
- Enrollar el cable de forma holgada sin tirantes.
- Guarde el aparato y sus accesorios en un lugar seguro, seco y libre de polvo.
- Recuerde limpiar el aparato después de cada uso y mantenerlo limpio y lubricado.

## **Especificaciones.**

- Entrada de corriente: 220V-240V 50/60Hz.
- Potencia total: 10W.
- Cuchillas de acero inoxidable.
- Ajuste de nivel de las cuchillas.
- 4 peines de corte medidas 3mm, 6mm, 9mm y 12mm.
- Accesorios (Peine, tijeras, aceite lubricante y cepillo de limpieza).

## **Condiciones De Garantía.**

- El aparato está cubierto contra cualquier defecto funcional de fábrica.
- La garantía cubre cualquier avería electromecánica siempre y cuando haya sido causada por fallo del propio sistema del fabricante.
- La garantía no cubre daños estéticos, golpes ni averías por mal uso.
- Cualquier señal o manipulación del aparato por terceros, será motivo de anulación de garantía.

### **Nota.**

Durante el período de garantía, el establecimiento que le vende el producto es el responsable de gestionar la garantía.

## **NORMAS DE PROTECCIÓN DEL MEDIO AMBIENTE**



Este aparato no se debe desechar con los residuos domésticos cuando finalice su durabilidad, sino que se debe ofrecer a un centro de reciclaje de aparatos eléctricos y electrónicos domésticos. Este símbolo en el aparato, manual de instrucciones y embalaje le avisa de este aspecto importante.

Los materiales utilizados en este aparato se pueden reciclar. Mediante el reciclaje de electrodomésticos, usted contribuye a fomentar la protección del medioambiente. Consulte a sus autoridades locales para obtener información acerca del punto de recogida.



## HAIR CLIPPING MACHINE



## INSTRUCTIONS MANUAL

TH – CP1352

### **ATTENTION**

- Read this instruction manual carefully before using the appliance.
- Keep this manual for future reference.
- If you lend the device to third parties, you must accompany it with this manual.
- Failure to comply with the instructions in this manual will be grounds for voiding the warranty.

### **Dear Customer:**

We appreciate the confidence placed in us when purchasing this Thulos product. Our main commitment is to offer excellent items, maintaining the strictest quality controls and complying with all current safety regulations, in order to present a perfect and safe product for domestic use.

## **IMPORTANT SAFETY INSTRUCTIONS**

### **DANGER.**


#### **To reduce the risk of electric shock:**

- Never use the appliance in areas with steam condensation.
- Never touch the appliance with wet hands or wet body.
- Do not immerse the power cord or the dryer in water.
- Never use in the shower or in areas where water can splash.
- Do not use in areas with a humid environment such as in bathrooms after showering.
- Do not use extension cords with this product.
- Never place the product where it can fall or be pushed into a bathtub or sink.
- Do not place or drop water, products or other liquids while it is plugged in.
- Always unplug from the outlet immediately after use.
- Do not disassemble the product and avoid temperatures above 100°C (212°F).

### **WARNINGS.**

- This appliance is designed only and exclusively for domestic use.
- Before plugging in the appliance, keep your body and hands very dry.
- Never use the appliance with your body or hands wet.
- The appliance should never be left unattended when it is plugged in.
- Requires supervision when used by children or people with reduced capacities who do not understand or are unaware of the danger and risks to which they are exposed using this device.
- Use this appliance only for its intended use as described in this manual.
- Keep the cord away from hot surfaces.
- Never use this appliance if the cord or plug is damaged, if you notice any abnormality operation, if it has been dropped or damaged, or if it has been dropped into water.
- Never insert objects into any of the openings on the appliance.
- Do not use outdoors or near aerosols (sprays) or where oxygen is being administered.
- Store this appliance and cord in areas free from moisture, dry areas free from dust.
- Make sure the cord is unplugged from power to store.
- Always clean and oil the appliance after each use and store it clean and oiled.
- Never touch the blades while the machine is plugged in.
- To change one cutting comb for another, always do it with the machine turned off.

## COMPONENTS AND ACCESSORIES.

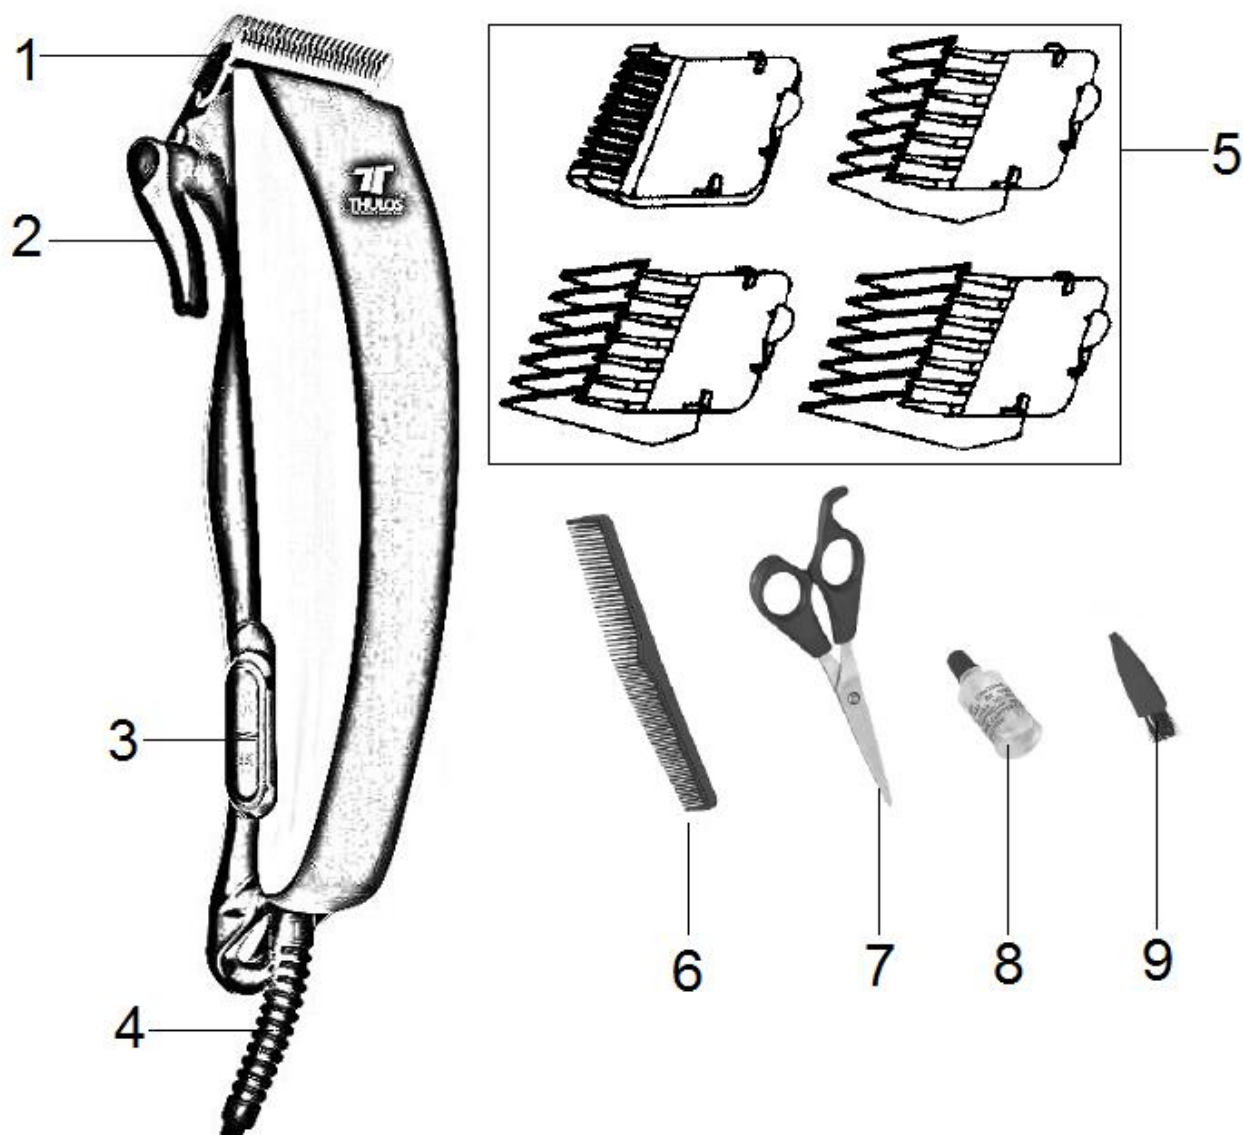

### Description of components:

1. BLADE ASSEMBLY.
2. CUTTING LEVEL ADJUSTMENT LEVER.
3. ON/OFF BUTTON.
4. POWER CABLE 220V.
5. CUTTING COMBS 4 SIZES (3mm / 6mm / 9mm / 12mm).
6. COMB.
7. SCISSORS.
8. OIL TO LUBRICATE THE BLADES AFTER EACH USE.
9. BRUSH FOR CLEANING AFTER EACH USE.

## Before Each Use.

- Check that the blades are correctly adjusted.
- Make sure the blades are clean and oiled.
- Inspect the power cable for any damage.
- The hair to be cut must be totally clean and dry.

## Operation.



- Extend the entire power cable.
- Put the desired cutting comb.
- Before plugging in, make sure the On/Off button is in the Off position.
- Plug in the electrical current.
- Turn on the machine with the On/Off button.
- Start cutting hair.
- Once the haircut is finished, stop and unplug from the electrical current.

## Cleaning the Hair Clipping Machine.

- Disconnect the power cable.
- Remove the cutting comb if you have it on.
- Clean with the cleaning brush to remove the remains of hair.
- Once you have cleaned the remains of hair, proceed to lubricate the blades.

### LUBRICATE THE BLADES:

- Plug the machine into the electrical current.
- Turn on the machine.
- With the machine on, pour a few drops of lubricating oil on the blades.
- Leave it on for a few seconds to lubricate the blades with the oil.
- Turn off the machine and unplug from the electrical current.

## **Storage.**

- Make sure it is turned off and unplugged from the electrical outlet.
- Clean the appliance as specified in the cleaning section.
- Wind the cable loosely without pulling.
- Store the appliance and its accessories in a safe, dry and dust-free place.
- Remember to clean the device after each use and keep it clean and lubricated.

## **Specifications.**

- Current input: 220V-240V 50/60Hz.
- Total power: 10W.
- Stainless steel blades.
- Blade level adjustment.
- 4 cutting combs measures 3mm, 6mm, 9mm and 12mm.
- Accessories (Comb, scissors, lubricating oil and cleaning brush).

## **WARRANTY CONDITIONS.**

- The device is covered against any factory functional defect.
- The warranty covers any electromechanical breakdown as long as has been caused by failure of the manufacturer's own system.
- The warranty does not cover cosmetic damage, bumps or breakdowns due to misuse.
- Any signal or manipulation of the device by third parties, It will be a reason for cancellation of the guarantee.

### **Note.**

During the warranty period, the establishment that sells you the product is responsible for managing the warranty.

## **GUIDELINES FOR PROTECTION OF THE ENVIRONMENT**



This appliance should not be put in to the domestic garbage at the end of its durability, but must be offered at a central point for there cycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and pack again put your attention to this import an tissue.

The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute important push to the protection of our environment. Ask your local authorities for in formation regarding the point of recollection.



MAQUINA CORTAPELOS  
HAIR CLIPPING MACHINE  
TH-CP1352



[www.thulos.com](http://www.thulos.com)

Servicio Técnico / Technical Service: [sat@grupothulos.com](mailto:sat@grupothulos.com)

Información / Information: [thulos@thulos.com](mailto:thulos@thulos.com)

