ELECTROTEK®

HIGH QUALITY HOUSEHOLD APPLIANCES

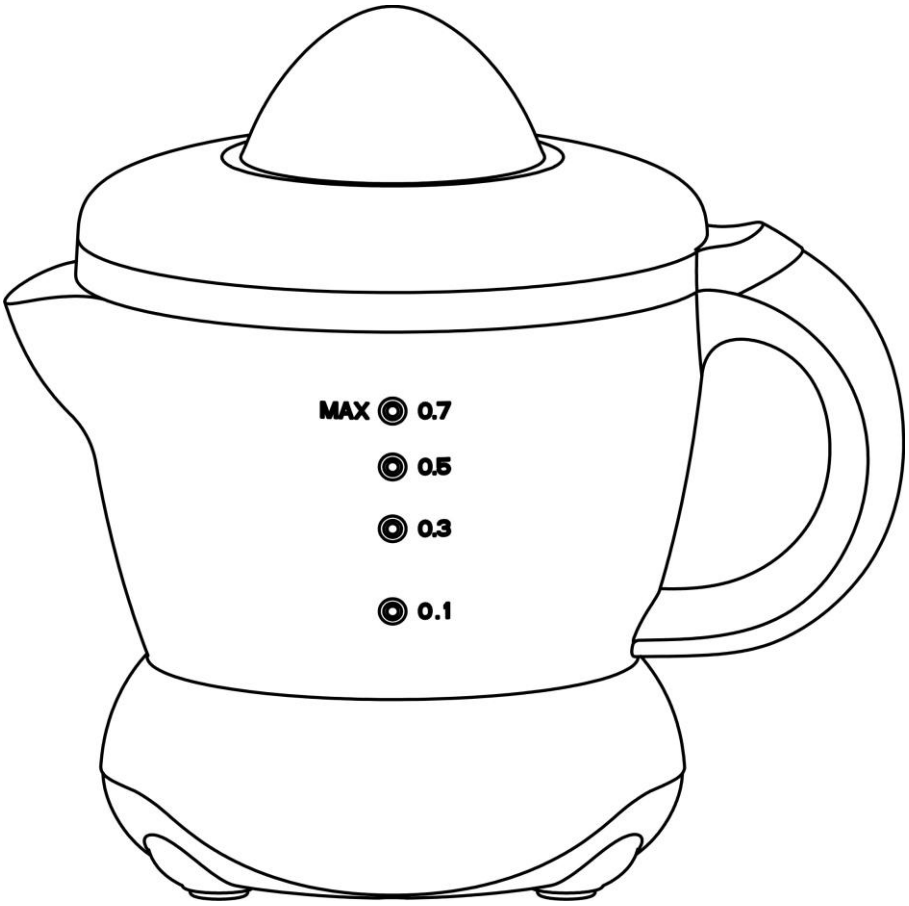

EXPRIMIDOR DE CÍTRICOS

CITRUS JUICER

MANUAL DE INSTRUCCIONES

ET-EX70

Por favor, lea cuidadosamente este manual antes de usar este dispositivo por primera vez. Guarde el manual para futuras consultas. For your safety and continued enjoyment of this product Always read the instruction book carefully before using.

Estimado cliente
Agradecemos la confianza depositada en nosotros al adquirir este producto ELECTROTEK®. Nuestro principal empeño es ofrecer artículos excelentes, manteniendo los más estrictos controles de calidad y cumpliendo todas las normativas vigentes de seguridad, con el objetivo de presentar un producto perfecto y seguro para el uso doméstico.

Lea detenidamente el presente manual de instrucciones y guárdelo para posterior consulta. En caso de entregar el aparato a terceros, entregue también el presente manual de instrucciones.

INSTRUCCIONES IMPORTANTES PARA SU SEGURIDAD

Al utilizar un producto eléctrico, hay ciertas precauciones que deben seguirse:

PELIGRO

Para reducir el riesgo de descarga eléctrica:

- Nunca utilizar el aparato en zonas con condensación de vapor.
- No tocar el aparato con las manos ni cuerpo mojados mientras esté conectado a corriente.
- Ni el cable de alimentación ni el aparato son para inmersión en agua ni su uso en la ducha.
- No utilice un cable de extensión con este producto.
- Nunca coloque el producto donde pueda caerse o ser empujado a una bañera o lavabo.
- No coloque ni deje caer agua, productos u otros líquidos mientras está enchufado a corriente.
- Siempre desenchufar el aparato de la toma de corriente inmediatamente después de su uso.
- No desmonte el producto y evite temperaturas por encima de 100ºC (212ºF).

ADVERTENCIAS

- Este aparato está diseñado exclusivamente para uso doméstico.
- Antes de enchufar el aparato, tener bien seco el cuerpo y las manos.
- Nunca utilizar el aparato con el cuerpo ni las manos húmedas.
- El aparato nunca debe ser dejado sin atención cuando está enchufado.
- No usar el aparato cerca del agua.
- Este aparato pueden utilizarlo niños con edad de 8 años y superior y personas con capacidades físicas, sensoriales o mentales reducidas o falta de experiencia y conocimiento, si se les ha dado la supervisión o instrucción apropiadas respecto al uso del aparato de una manera segura y comprenden los peligros que implica.
- Los niños no deben jugar con el aparato.
- La limpieza y el mantenimiento a realizar por el usuario no deben realizarlo los niños sin supervisión.
- Si el cable de alimentación está dañado, debe ser sustituido por el fabricante, por su servicio postventa o por personal cualificado similar con el fin de evitar un peligro.
- Mantener el cable alejado de superficies calientes.

- Nunca opere este aparato si el cable o el enchufe están dañados, si no está funcionando correctamente, si se ha caído o dañado, o si se ha caído al agua.
- Nunca inserte un objeto en ninguna de las aberturas del aparato.
- No utilizar al aire libre ni cerca de aerosoles (espray) o donde se está administrando oxígeno.
- Almacene este aparato y el cable en áreas secas y libres de humedad.
- No utilice cables de extensión con este aparato.
- Para obtener protección adicional, le recomendamos que instale un dispositivo de corriente residual (RCD) con una corriente de funcionamiento residual nominal que no exceda los 30mAen el circuito eléctrico que alimenta el baño. Pídale consejo a su instalador.

SIMBOLOGÍA

- No utilizar este aparato en bañeras, duchas o depósitos llenos de agua.
- Prohibido usar el aparato cerca de agua o cualquier otro líquido.
- Este aparato no debe salpicarse con agua.

DESCRIPCIÓN

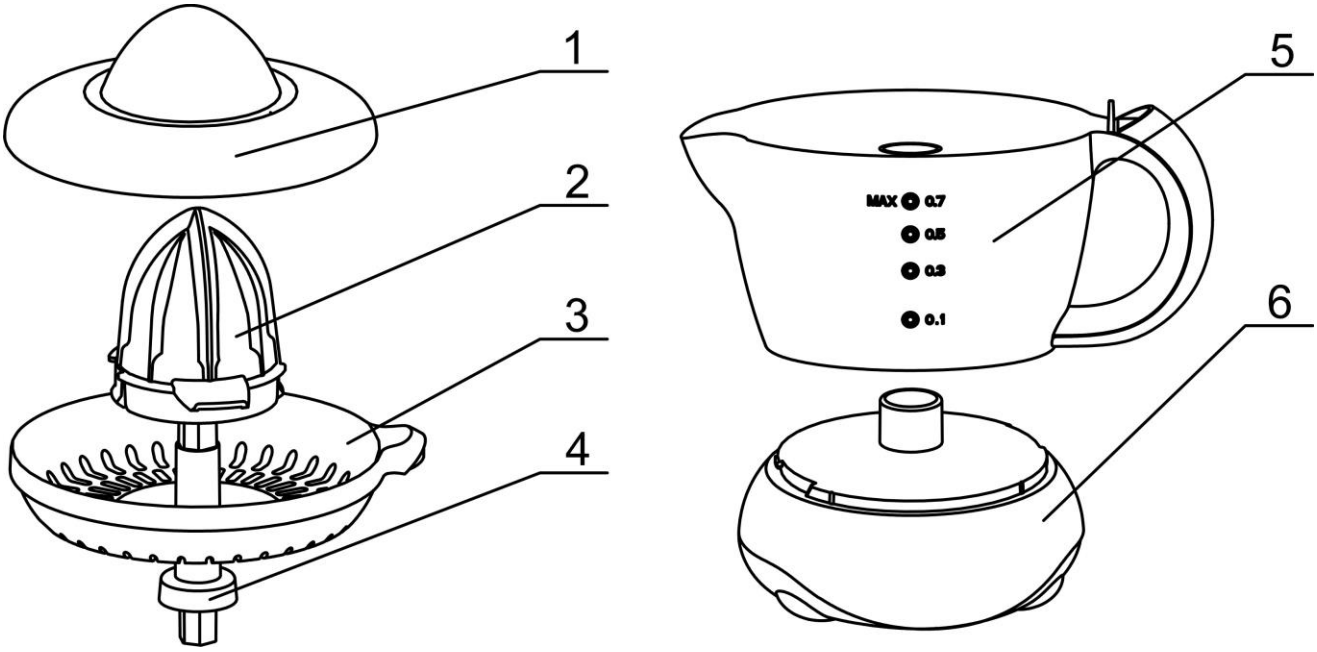

1. Tapa de protección
2. Cono
3. Filtro
4. Ejes de transmisión
5. Jarra
6. Base con motor

ALMACENAMENTO Y CUIDADOS

1) Desconecte el aparato de la red eléctrica cuando no esté en uso y antes de realizar cualquier tarea de limpieza.
2) No guarde el aparato en posición vertical.
3) Guarde el aparato en un lugar seco, sin polvo y fuera de la luz solar directa.

INSTRUCCIONES DE USO

1) Desenrolle el cable por completo antes de enchufarlo.
2) Conecte el aparato a la red eléctrica.
3) Cortar los cítricos para ser exprimidos por la mitad.
4) Coloque el vaso en la salida de jugo del aparato.
5) Encienda el aparato empujando hacia abajo la fruta cítrica, una vez que se haya colocado en el cono de jugo.
6) Para detener el aparato, simplemente deje de aplicar presión al cono.
7) Retire tanto el cono como el filtro para vaciar la jarra.
8) Vierta el jugo de la jarra en los vasos para servir directamente.
9) Si procesa una gran cantidad de fruta, debe limpiar periódicamente el filtro y eliminar los restos de la pulpa.

LIMPIEZA

- Desenchufe el aparato de la red eléctrica y déjelo enfriar antes de comenzar cualquier limpieza.
- Excepto por la unidad de potencia y la conexión a la red eléctrica, todas las piezas se pueden limpiar con detergente y agua o en el líquido de lavado. Enjuague bien para eliminar todos los restos de detergente.
- Limpie el equipo con un paño húmedo con unas gotas de detergente y luego séquelo.
- No utilice disolventes o productos con un pH ácido o alcalino, como blanqueador o productos abrasivos, para limpiar el aparato.
- No sumerja el aparato en agua ni en ningún otro líquido ni lo coloque debajo de un grifo abierto.
- Es aconsejable limpiar el aparato con regularidad y eliminar cualquier resto de comida.
- Las siguientes partes se pueden limpiar en el lavavajillas: cubierta protectora, cono, filtro y jarra.

MEDIO AMBIENTE

¡Usted también puede contribuir a la conservación del medio ambiente!

Este aparato no debe desecharse con la basura doméstica al final de su vida útil, sino que se debe depositar en un punto de recogida para el reciclaje de aparatos eléctricos y electrónicos. Este símbolo en el aparato, manual de instrucciones y embalaje quiere atraer su atención sobre esta importante cuestión. Los materiales utilizados en este aparato se pueden reciclar. Mediante el reciclaje de electrodomésticos, usted contribuye a fomentar la protección del medioambiente. Solicite más información sobre los puntos de recogida a las autoridades locales

CONDICIONES DE GARANTÍA

- Por la presente se garantiza la calidad de este producto según plazos y condiciones de la legislación vigente.
- Quedan excluidos de esta garantía todos aquellos aparatos que presenten golpes o manipulaciones incorrectas, así como las deficiencias ocasionadas por un uso anormal o abusivo.
- La empresa, se reserva el derecho a elegir entre reparar, sustituir o canjear por otro de características similares, en función del tipo de avería o de las existencias de nuestros almacenes.
- El producto está garantizado contra todo defecto de fabricación.

EN

Dear Customer
We thank you very much for having purchased this ELECTROTEK® product. We kindly ask you to read and save this instruction manual.

Please read these operating instructions carefully and keep them in a safe place. If you pass the unit on to someone else, please give them these operating instructions as well.

INSTRUCTIONS BY AND FOR YOUR SAFETY

When using an electrical product, there are certain precautions that must be followed:

DANGER

To reduce the risk of electric shock:

- Never use the appliance in areas with steam condensation.
- Do not touch the appliance with wet hands or body while it is connected to power.
- Neither the power cord nor the dryer are for immersion in water or use in the shower.
- Do not use an extension cord with this product.
- Never place the product where it can fall or be pushed into a bathtub or sink.
- Do not place or drop water, products or other liquids while it is plugged into the mains.
- Always unplug the appliance from the outlet immediately after use.
- Do not disassemble the product and avoid temperatures above 100ºC (212ºF).

WARNINGS

- This appliance is designed exclusively for domestic use.
- Before plugging in the appliance, keep your body and hands dry.
- Never use the appliance with your body or hands wet.
- The appliance should never be left unattended when it is plugged in.
- Do not use the appliance near water.
- This appliance can be used by children aged 8 years and above and by people with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given appropriate supervision or instruction regarding the use of the appliance in a safely and understand the dangers involved.
- Children must not play with the appliance.
- Cleaning and maintenance to be carried out by the user must not be carried out by children unsupervised.
- If the power cord is damaged, it must be replaced by the manufacturer, by its service after-sales or similar qualified personnel in order to avoid a danger.
- Keep the cable away from hot surfaces.
- Never operate this appliance if the cord or plug is damaged, if it is not working correctly, if it has been dropped, damaged, or dropped into water.
- Never insert an object into any of the openings on the appliance.
- Do not use outdoors or near aerosols (sprays) or where oxygen is being administered.

- Store this appliance and the cord in dry areas free of moisture.
- Do not use extension cords with this appliance.
- For additional protection, we recommend that you install a current device residual current (RCD) with a rated residual operating current not exceeding 30mA in the electrical circuit that feeds the bath. Ask your installer for advice.

SYMBOLS

- Do not use this appliance in bathtubs, showers or tanks full of water.
- Prohibited to use the appliance near water or any other liquid.
- This appliance must not be splashed with water.

STORAGE AND CARE

1) Do not store the appliance in a vertical position.
2) Store the appliance in a dry place, free from dust and out of direct sunlight.
3) Any misuse or failure to follow the instructions for use renders the guarantee and the manufacturer's liability null and void.

DESCRIPTION

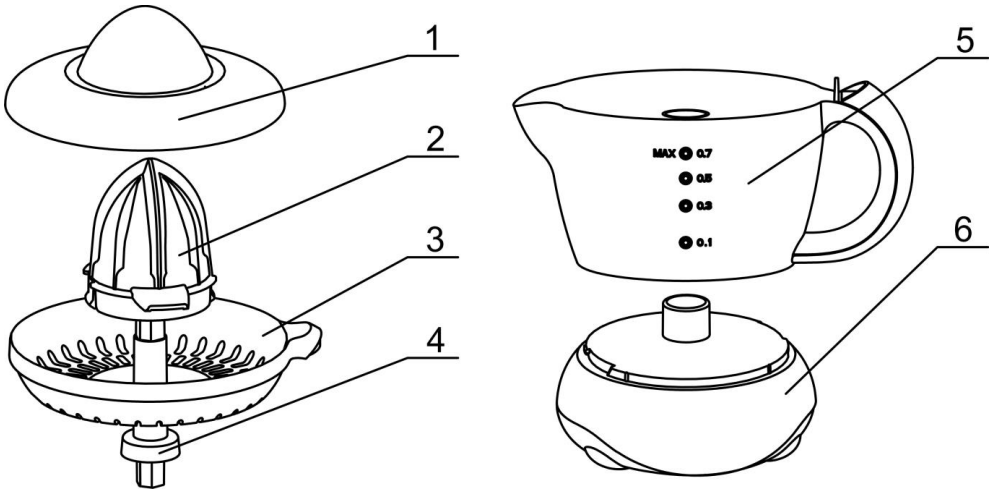

1. Protective cover
2. Cone
3. Filter
4. Transmission axes
5. Jug
6. Motor base

INSTRUCTIONS FOR USE

1) Unroll the cord completely before plugging in.
2) Connect the appliance to the mains.
3) Cut the citrus fruit/s to be squeezed in half.
4) Place the glass at the appliance's juice exit.

5) Turn on the appliance by pushing down on the piece of citrus fruit, once it has been placed on the juicing cone.
6) To stop the appliance, simply stop applying pressure to the cone.
7) Remove both the cone and the filter to empty the jug.
8) Pour juice out of the jug and into glasses to serve directly.
9) If you process a large quantity of fruit, you must periodically clean the filter and remove the remains of the pulp.

CLEANING

- Unplug the appliance from the mains and let it cool before starting any cleaning.
- Except for the power unit and the mains connection, all the parts can be cleaned with detergent and water or in washing up liquid. Rinse thoroughly to remove all traces of detergent.
- Clean the equipment with a damp cloth with a few drops of washing-up liquid and then dry.
- Do not use solvents, or products with an acid or base pH such as bleach, or abrasive products, for cleaning the appliance.
- Do not submerge the appliance in water or any other liquid, or place it under a running tap.
- It is advisable to clean the appliance regularly and remove any food remains.
- The following parts can be cleaned in the dishwasher: Protective cover, Cone, Filter, Jug.

ENVIRONMENT

This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

WARRANTY CONDITIONS

- The quality of this product according to terms and conditions of the current legislation is guaranteed.
- Excluded from this guarantee all those devices which have bumps or improper handling and defects caused by abnormal or abusive use.
- The company reserves the right to choose between repair, replace or exchanged for another with similar characteristics, depending on the type of damage or stocks from our warehouses.
- The product is guaranteed against all manufacturing defects.

ELECTROTEK®

HIGH QUALITY HOUSEHOLD APPLIANCES

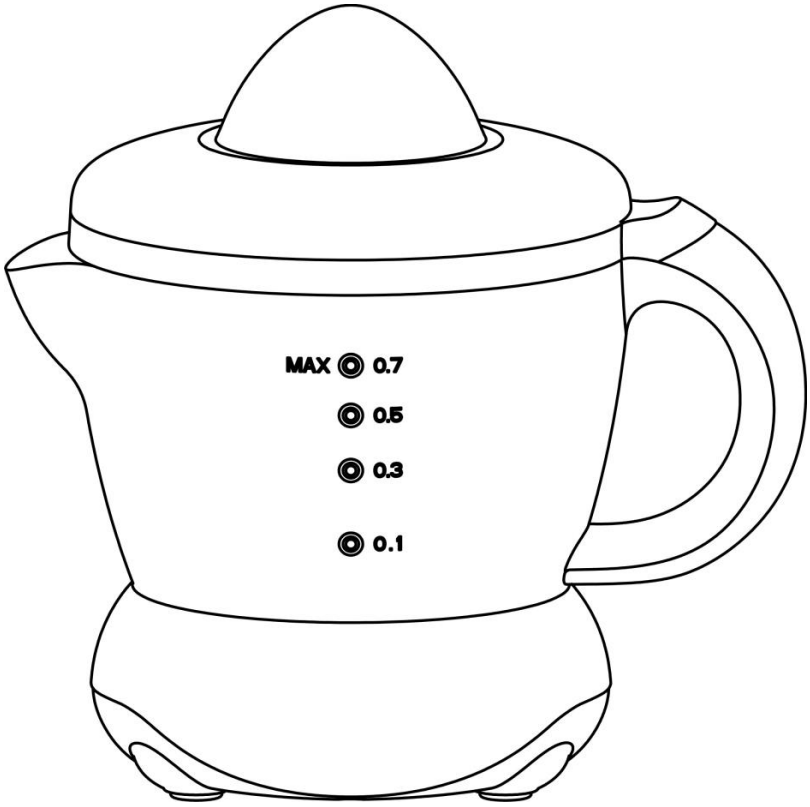

EXPRIMIDOR DE CÍTRICOS
CITRUS JUICER
ET-EX70

EAN:

VERDE/GREEN: 8436568810515

NARANJA/ORANGE: 8436568810522